

Preface

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

Version 1.0

Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Trademark Recognition

Microsoft, MS-DOS and Windows are registered trademarks of Microsoft Corp.

MMX, Pentium, Pentium-II, Pentium-III, Celeron are registered trademarks of Intel Corporation.

Other product names used in this manual are the properties of their respective owners and are acknowledged.

Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment onto an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Shielded interconnect cables and a shielded AC power cable must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

Preface

Declaration of Conformity

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation

Canadian Department of Communications

This class B digital apparatus meets all requirements of the Canadian Interference-causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

About the Manual

The manual consists of the following:

Chapter 1 Introducing the Motherboard	Describes features of the motherboard. Go to ➞ page 1
Chapter 2 Installing the Motherboard	Describes installation of motherboard components. Go to ➞ page 7
Chapter 3 Using BIOS	Provides information on using the BIOS Setup Utility. Go to ➞ page 25
Chapter 4 Using the Motherboard Software	Describes the motherboard software. Go to ➞ page 45
Chapter 5 Setting Up eJIFFY	Describes the eJIFFY setting up Go to ➞ page 49
Chapter 6 Trouble Shooting	Provides basic trouble shooting tips Go to ➞ page 67

Preface

TABLE OF CONTENTS

Preface	i
Chapter 1	1
Introducing the Motherboard	1
Introduction.....	1
Feature.....	2
Specifications.....	4
Motherboard Components.....	5
Chapter 2	7
Installing the Motherboard	7
Safety Precautions.....	7
Choosing a Computer Case.....	7
Installing the Motherboard in a Case.....	7
Checking Jumper Settings.....	8
<i>Setting Jumpers.....</i>	8
<i>Checking Jumper Settings.....</i>	9
<i>Jumper Settings.....</i>	9
Installing Hardware.....	10
<i>Installing the Processor.....</i>	10
<i>Installing Memory Modules.....</i>	12
<i>Expansion Slots.....</i>	15
<i>Connecting Optional Devices.....</i>	17
<i>Installing a SATA Hard Drive.....</i>	19
Connecting I/O Devices.....	20
Connecting Case Components.....	21
<i>Front Panel Header.....</i>	24
Chapter 3	25
Using BIOS	25
About the Setup Utility.....	25
<i>The Standard Configuration.....</i>	25
<i>Entering the Setup Utility.....</i>	25
<i>Resetting the Default CMOS Values.....</i>	26
Using BIOS.....	27
<i>Standard CMOS Setup.....</i>	28
<i>Advanced Setup.....</i>	30
<i>Advanced Chipset Setup.....</i>	32
<i>Integrated Peripherals.....</i>	33
<i>Power Management Setup.....</i>	34

<i>PCI/PnP Setup</i>	35
<i>PC Health Status</i>	36
<i>M.I.B.II (MB Intelligent BIOS II)</i>	40
<i>Load Default Settings</i>	42
<i>Supervisor Password</i>	42
<i>User Password</i>	43
<i>Save & Exit Setup</i>	43
<i>Exit Without Saving</i>	43
<i>Updating the BIOS</i>	44
 Chapter 4	 45
Using the Motherboard Software	45
About the Software DVD-ROM/CD-ROM.....	45
Auto-installing under Windows XP/Vista/7.....	45
<i>Running Setup</i>	46
Manual Installation.....	48
Utility Software Reference.....	48
 Chapter 5	 49
Setting Up eJIFFY	49
Introduction.....	49
Installation and BIOS Setup.....	50
Entering eJIFFY.....	53
Features Icons.....	54
Usage FAQ.....	55
 Chapter 6	 67
Trouble Shooting	67
Start up problems during assembly.....	67
Start up problems after prolong use.....	68
Maintenance and care tips.....	68
Basic Troubleshooting Flowchart.....	69

Chapter 1

Introducing the Motherboard

Introduction

Thank you for choosing the H55H-I motherboard. This motherboard is a high performance, enhanced function motherboard designed to support the LGA1156 socket for Intel® Clarkdale processor for high-end business or personal desktop markets.

This motherboard is based on Intel® H55 Express Chipset for best desktop platform solution. H55 is a single-chip, highly integrated, high performance Hyper-Threading peripheral controller, unmatched by any other single chip-device controller. This motherboard supports up to 8 GB of system memory with dual channel DDR3 1333/1066 MHz. High resolution graphics via one PCI Express slot, intended for Graphics Interface, is fully compliant to the PCI Express Base Specification revision 2.0. It implements an EHCI compliant interface that provides ten USB 2.0 ports (six USB ports and two USB 2.0 headers support additional four USB ports).

The motherboard is equipped with advanced full set of I/O ports in the rear panel, including one DVI port, one ESATA port, one VGA port, six USB ports, one HDMI port, one LAN port, one SPDIFO port and audio jacks for microphone, line-in and 8-ch line-out.

Feature

Processor

The motherboard uses an LGA1156 type of Intel® Clarkdale processor that carries the following features:

- Intel® Clarkdale processor
- Supports “Hyper-Threading” technology CPU

“Hyper-Threading” technology enables the operating system into thinking it’s hooked up to two processors, allowing two threads to be run in parallel, both on separate “logical” processors within the same physical processor.



This board supports CPU up to 87W TDP.

Chipset

The Intel H55 Express Chipset is a single-chip with proven reliability and performance.

- One x16 PCI Express Gen2 ports each supporting up to 8 GB/s direction peak bandwidth
- Integrated SATA 3.0 Gb/s Host Controller
- Ten USB 2.0 ports supported
- Serial Peripheral Interface (SPI) support
- Enhanced DMA Controller, interrupt controller, and timer functions
- Integrated Graphics Support with PAVP 1.5

Memory

- Supports DDR3 1333/1066 DDR3 SDRAM with Dual-channel architecture
- Accommodates two unbuffered DIMMs
- 2 x 240-pin DDR3 DIMM sockets support up to 8 GB

Onboard LAN (optional)

<ul style="list-style-type: none"> • Supports PCI Express™ 1.1 • Integrated 10/100/1000 transceiver • Wake-on-LAN and remote wake-up support
<ul style="list-style-type: none"> • Supports PCI Express™ 1.1 • Integrated 10/100 transceiver • Wake-on-LAN and remote wake-up support

Introducing the Motherboard

Audio

This motherboard may support either of the following Audio chipsets:

- 7.1+2 Channel High Definition Audio Codec
- Meets Microsoft WLP3.x (Windows Logo Program) audio requirements
- All DACs supports 44.1k/48k/96k/192kHz sample rate
- Software selectable 2.5V/3.2V/4.0V VREFOUT
- Direct Sound 3D. compatible
- Power Support: Digital: 3.3V; Analog: 5.0V

Expansion Options

The motherboard comes with the following expansion options:

- One PCI Express x16 slot for Graphic Interface
- Four 7-pin SATA connectors

Integrated I/O

The motherboard has a full set of I/O ports and connectors:

- One SPDIFO port
- One DVI port
- One VGA port
- Six USB ports
- One LAN port
- One ESATA port
- One HDMI port
- Audio jacks for microphone, line-in and 8-ch line-out

BIOS Firmware

This motherboard uses AMI BIOS that enables users to configure many system features including the following:

- Power management
- Wake-up alarms
- CPU parameters
- CPU and memory timing

The firmware can also be used to set parameters for different processor clock speeds.



1. Some hardware specifications and software items are subject to change without prior notice.


2. Due to chipset limitation, we recommend that motherboard be operated in the ambience between 0 and 50° C.

Specifications

CPU	<ul style="list-style-type: none"> • LGA1156 socket for Intel® Clarkdale processor • Supports “Hyper-Threading” technology CPU
Chipset	<ul style="list-style-type: none"> • Intel H55 Express Chipset
Memory	<ul style="list-style-type: none"> • Dual-channel DDR3 memory architecture • 2 x 240-pin DDR3 DIMM sockets support up to 8 GB • Supports DDR3 1333/1066 DDR3 SDRAM
Expansion Slots	<ul style="list-style-type: none"> • 1 x PCI Express Gen2 x16 slot
Storage	<ul style="list-style-type: none"> • Supported by Intel H55 Express Chipset • 4 x Serial ATA 3.0 Gb/s Host Controllers
Audio	<ul style="list-style-type: none"> • ALC892 8-CH High definition audio CODEC
LAN	<ul style="list-style-type: none"> • Realtek RTL8111DL 10/100/1000 Fast Ethernet Controller & RTL8103E 10/100 LAN Fast Ethernet Controller
Rear Panel I/O	<ul style="list-style-type: none"> • 1 x SPDIFO port • 1 x VGA port • 1 x HDMI port • 1 x DVI port • 6 x USB ports • 1 x ESATA port • 1 x RJ45 LAN connector • 1 x Audio port (Line in, microphone in and 8-ch line out)
Internal I/O Connectors & Headers	<ul style="list-style-type: none"> • 1 x 24-pin ATX Power Supply connector & ATX4P connector • 4 x Serial ATA connectors • 2 x USB 2.0 headers support additional 4 USB ports • 1 x Chassis Detect header • 1 x SPDIF out header • 1 x Front panel header • 1 x Speaker header • 1 x Front panel audio header • CPU_FAN/SYS_FAN connectors
System BIOS	<ul style="list-style-type: none"> • AMI BIOS with 64Mb SPI ROM • Supports Plug and Play, STR/STD, Hardware monitor, DMI • F11 hot key for boot up devices option • CPU voltage adjustable • Memory voltage adjustable
Form Factor	<ul style="list-style-type: none"> • Mini-ITX Size, 170 mm x 170 mm

Introducing the Motherboard

Motherboard Components

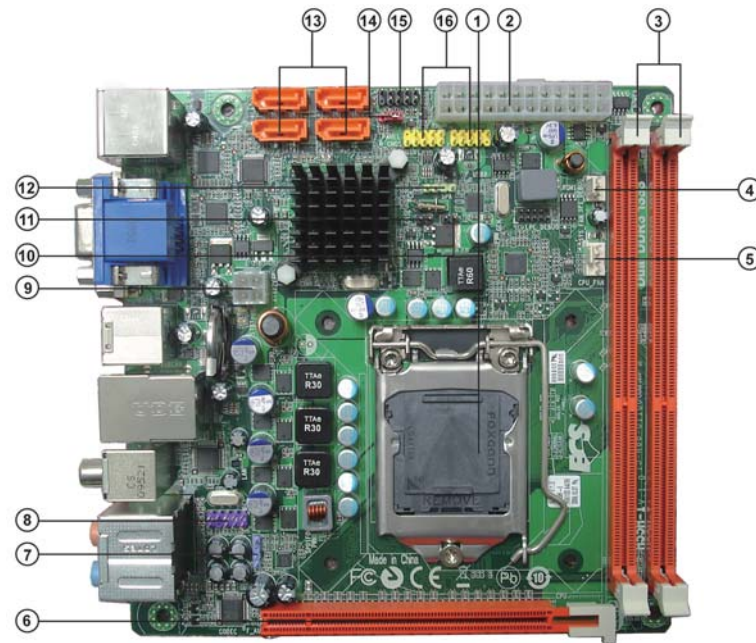

Introducing the Motherboard

Table of Motherboard Components

LABEL	COMPONENTS
1. CPU Socket	LGA1156 socket for Intel [®] Clarkdale processor
2. ATX_POWER	Standard 24-pin ATX power connector
3. DDR3_1~2	240-pin DDR3 SDRAM slots
4. SYS_FAN	System cooling fan connector
5. CPU_FAN	CPU cooling fan connector
6. PCIEX16	PCI Express x16 graphics card slot
7. SPDIFO1	SPDIF out header
8. F_AUDIO	Front panel audio header
9. ATX12V4P	4-pin +12V power connector
10. ME_UNLOCK	ME unlock header
11. CASE	Chassis detect header
12. SPK	Speaker header
13. SATA1~4	Serial ATA connectors
14. CLR_CMOS	Clear CMOS jumper
15. F_PANEL	Front panel switch/LED header
16. F_USB1~2	Front panel USB headers

This concludes Chapter 1. The next chapter explains how to install the motherboard.

Chapter 2

Installing the Motherboard

Safety Precautions

- Follow these safety precautions when installing the motherboard
- Wear a grounding strap attached to a grounded device to avoid damage from static electricity
- Discharge static electricity by touching the metal case of a safely grounded object before working on the motherboard
- Leave components in the static-proof bags they came in
- Hold all circuit boards by the edges. Do not bend circuit boards

Choosing a Computer Case

There are many types of computer cases on the market. The motherboard complies with the specifications for the Mini-ITX system case. Some features on the motherboard are implemented by cabling connectors on the motherboard to indicators and switches on the system case. Make sure that your case supports all the features required. Make sure that your case has sufficient power and space for all drives that you intend to install.

Most cases have a choice of I/O templates in the rear panel. Make sure that the I/O template in the case matches the I/O ports installed on the rear edge of the motherboard.


This motherboard carries a Mini-ITX form factor of 170 x 170 mm. Choose a case that accommodates this form factor.

Installing the Motherboard in a Case

Refer to the following illustration and instructions for installing the motherboard in a case.

Most system cases have mounting brackets installed in the case, which correspond to the holes in the motherboard. Place the motherboard over the mounting brackets and secure the motherboard onto the mounting brackets with screws.

Ensure that your case has an I/O template that supports the I/O ports and expansion slots on your motherboard.

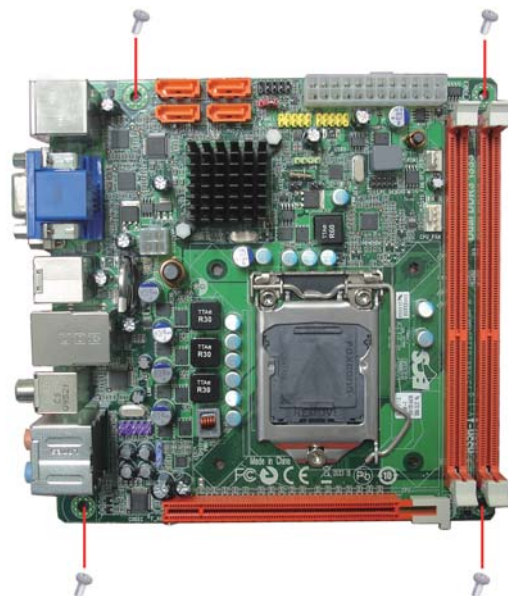

Do not over-tighten the screws as this can stress the motherboard.

Checking Jumper Settings

This section explains how to set jumpers for correct configuration of the motherboard.

Setting Jumpers

Use the motherboard jumpers to set system configuration options. Jumpers with more than one pin are numbered. When setting the jumpers, ensure that the jumper caps are placed on the correct pins.

The illustrations show a 2-pin jumper. When the jumper cap is placed on both pins, the jumper is **SHORT**. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is **OPEN**.




SHORT



OPEN


This illustration shows a 3-pin jumper. Pins 1 and 2 are **SHORT**.

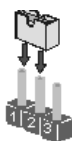


Installing the Motherboard

Checking Jumper Settings

The following illustration shows the location of the motherboard jumpers. Pin 1 is labeled.

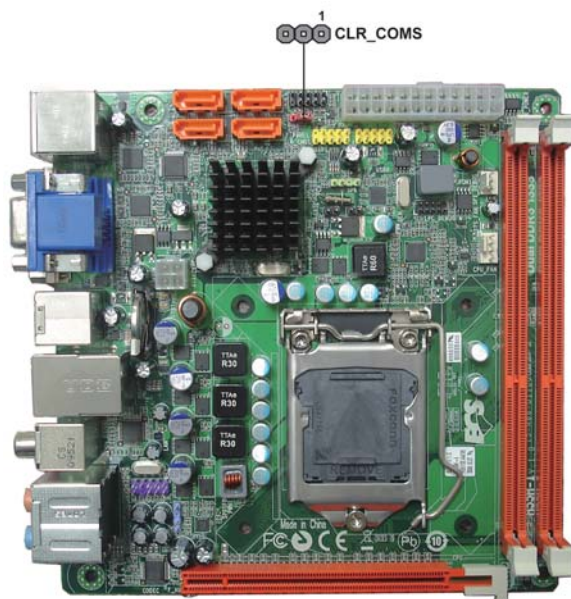

Jumper Settings

Jumper	Type	Description	Setting (default)	
CLR_CMOS	3-pin	Clear CMOS	1-2: NORMAL 2-3: CLEAR CMOS Before clearing the CMOS, make sure to turn off the system.	 CLR_CMOS



To avoid the system instability after clearing CMOS, we recommend users to enter the main BIOS setting page to “Load Default Settings” and then “Save and Exit Setup”.

Installing the Motherboard

Installing Hardware

Installing the Processor



*Caution: When installing a CPU heatsink and cooling fan make sure that you **DO NOT** scratch the motherboard or any of the surface-mount resistors with the clip of the cooling fan. If the clip of the cooling fan scrapes across the motherboard, you may cause serious damage to the motherboard or its components.*

On most motherboards, there are small surface-mount resistors near the processor socket, which may be damaged if the cooling fan is carelessly installed.

Avoid using cooling fans with sharp edges on the fan casing and the clips. Also, install the cooling fan in a well-lit work area so that you can clearly see the motherboard and processor socket.

Before installing the Processor

This motherboard automatically determines the CPU clock frequency and system bus frequency for the processor. You may be able to change the settings in the system Setup Utility. We strongly recommend that you do not over-clock processors or other components to run faster than their rated speed.



Warning:

1. Over-clocking components can adversely affect the reliability of the system and introduce errors into your system. Over-clocking can permanently damage the motherboard by generating excess heat in components that are run beyond the rated limits.

2. Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.

This motherboard has an LGA1156 socket. When choosing a processor, consider the performance requirements of the system. Performance is based on the processor design, the clock speed and system bus frequency of the processor, and the quantity of internal cache memory and external cache memory.

Fail-Safe Procedures for Over-clocking

When end-users encounter failure after attempting over-clocking, please take the following steps to recover from it.

1. Shut down the computer.
2. Press and hold the “Page Up Key (PgUp)” of the keyboard, and then boot the PC up.
3. Two seconds after the PC boots up, release the “Page Up Key (PgUp)”.
4. The BIOS returns to the default setting by itself.

Installing the Motherboard

CPU Installation Procedure

The following illustration shows CPU installation components.

- A. Opening of the Load Plate
 - Put your thumb on the tail of the load plate and press the tail down.
 - Rotate the load plate to fully open position.
- B. Disengaging of the Load Lever
 - Hold the hook of lever and pull it to the left side to clear retention tab.
 - Rotate the load lever to fully open position.
- C. Removing the Cap
 - Be careful not to touch the contact at any time.
- D. Inserting the Package
 - Grasp the package. Ensure to grasp on the edge of the substrate.
 - Make sure pin 1 indicator is on your bottom-left side.
 - Aim at the socket and place the package carefully into the socket by purely vertical motion.
- E. Closing the Load Plate
 - Rotate the load plate onto the package IHS (Intergraded Heat Spreader).
 - Engage the load lever while pressing down lightly onto the load plate.
 - Secure the load lever with the hook under retention tab.
- F. Fasten the cooling fan supporting base onto the CPU socket on the motherboard.
- G. Make sure the CPU fan is plugged to the CPU fan connector. Please refer to the CPU cooling fan user's manual for more detail installation procedure.



1. To achieve better airflow rates and heat dissipation, we suggest that you use a high quality fan with 3800 rpm at least. CPU fan and heatsink installation procedures may vary with the type of CPU fan/heatsink supplied. The form and size of fan/heatsink may also vary.

2. DO NOT remove the CPU cap from the socket before installing a CPU.

3. Return Material Authorization (RMA) requests will be accepted only if the motherboard comes with the cap on the LGA1156 socket.

Installing the Motherboard

Installing Memory Modules

This motherboard accommodates four memory modules. It can support two 240-pin DDR3 1333/1066. The total memory capacity is 8 GB.

DDR3 SDRAM memory module table

Memory module	Memory Bus
<i>DDR3 1066</i>	<i>533 MHz</i>
<i>DDR3 1333</i>	<i>667 MHz</i>

You must install at least one module in any of the two slots. The total memory capacity is up to 8 GB.




Do not remove any memory module from its antistatic packaging until you are ready to install it on the motherboard. Handle the modules only by their edges. Do not touch the components or metal parts. Always wear a grounding strap when you handle the modules.

Installation Procedure

Refer to the following to install the memory modules.

- 1 This motherboard supports unbuffered DDR3 SDRAM .
- 2 Push the latches on each side of the DIMM slot down.
- 3 Align the memory module with the slot. The DIMM slots are keyed with notches and the DIMMs are keyed with cutouts so that they can only be installed correctly.
- 4 Check that the cutouts on the DIMM module edge connector match the notches in the DIMM slot.
- 5 Install the DIMM module into the slot and press it firmly down until it seats correctly. The slot latches are levered upwards and latch on to the edges of the DIMM.
- 6 Install any remaining DIMM modules.

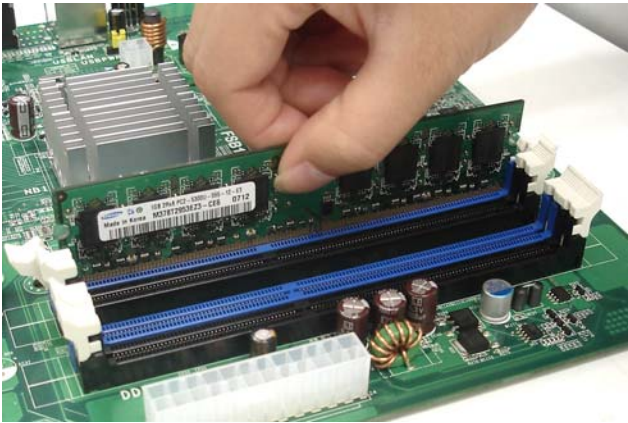

Installing the Motherboard

Table A: DDR3 (memory module) QVL (Qualified Vendor List)

The following DDR3 1600/1333/1066 memory modules have been tested and qualified for use with this motherboard.

Type	Size	Vendor	Module Name
DDR3 1066	512 MB	ELPIDA	PC3-8500U-7-00-AP
		Hynix	HYMT112U64ZNF8-G8 AA
			HMT112U6AFP8C-G7N0 AA
		Kingston	KVR1066D3N7/1G
		Micron	MT8JTF12864AY-1G1D1
			MT8JTF12864AZ-1G1F1
		Ramaxel	RMR1810NA48E7F-1066-LF
		Samsung	GOLD BAR M378B2873DZ1-CF8 0818
	2 GB	elixir	M2Y2G64CB8HC5N-BE
			M2Y2G64CB8HC9N-BE
		Hynix	HYMT125U64ZNF8-G8 AA
			HMT125U6AFP8C-G7N0 AA
		Micron	MT16JTF25664AZ-1G1F1
			MT16JTF25664AY-1G1D1
			MT16JTF25664AY-1G1D1
		Samsung	M378B5673DZ1-CF8 0842
DDR3 1333	1 GB	A-data	AD3U1333B1G9-B
		Hynix	HMT112U6AFP8C-H9N0 AA
		KingMax	FLFD45F-B8KG9 NAES
		Micron	MT8JTF12864AZ-1G4F1
			MT8JTF12864AY-1G4D1
		PSC	AL7F8G73D-DG1
		Samsung	M378B2873DZ1-CH9
			M378B2873EH1-CH9
		Silicon Power	SP001GBLTU133S01


Type	Size	Vendor	Module Name
DDR3 1333	2 GB	A-data	AD3U1333B2G9-B
		Apacer	78.A1GC6.9L1
		Elixir	M2F2G64CB8HA4N-CG 0903.TW
		elixir	M2Y2G64CB8HC9N-CG
		G.SKILL	F3-10666CL9D-4GBRL
			F3-10666CL8D-4GBE CO
			F3-10666CL9D-4GBNQ
		Hynix	HMT125U6AFP8C-H9N0 AA
		KingMax	FLFE85F-B8KG9 NEES
		Micron	MT16JTF25664AY-1G4D1
	4 GB	Nanya	NT2GC64B8HAONF-CG 0917.TW
		PSC	AL8F8G73D-DG1
		Samsung	M378B5673EH1-CH9
		Silicon Power	SP002GBLTU133S01
		Kingston	KVR1333D3N9/4G
DDR3 1600	2 GB	A-data	High speed flying dragon
		Elixir	M2Y2G64CB8HA9N-DG 0928.TWr
		G.SKILL	F3-12800CL9D-4GBNQ
			F3-12800CL9D-4GBE CO
			F3-12800CL7D-4GBE CO
			F3-12800CL9D-4GBRL

Installing the Motherboard

Expansion Slots

Installing Add-on Cards

The slots on this motherboard are designed to hold expansion cards and connect them to the system bus. Expansion slots are a means of adding or enhancing the motherboard's features and capabilities. With these efficient facilities, you can increase the motherboard's capabilities by adding hardware that performs tasks that are not part of the basic system.

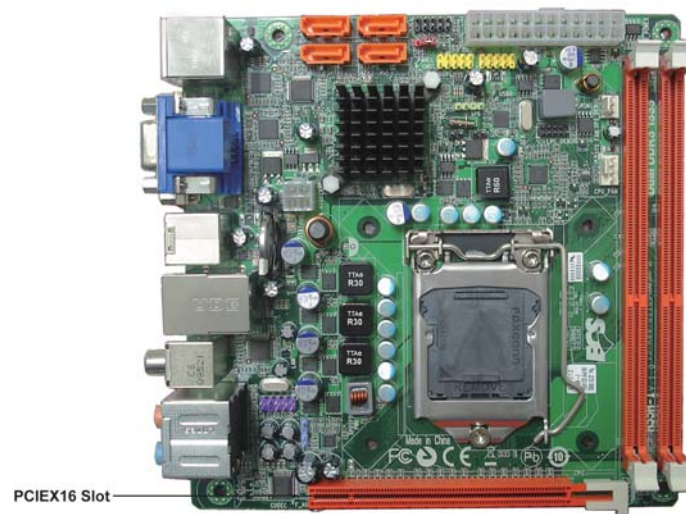

PCIEX16 Slot The PCI Express slot is used to install an external PCI Express graphics card that is fully compliant to the PCI Express Gen 2.




Before installing an add-on card, check the documentation for the card carefully. If the card is not Plug and Play, you may have to manually configure the card before installation.

Installing the Motherboard

Follow these instructions to install an add-on card:

- 1 Remove a blanking plate from the system case corresponding to the slot you are going to use.
- 2 Install the edge connector of the add-on card into the expansion slot. Ensure that the edge connector is correctly seated in the slot.
- 3 Secure the metal bracket of the card to the system case with a screw.

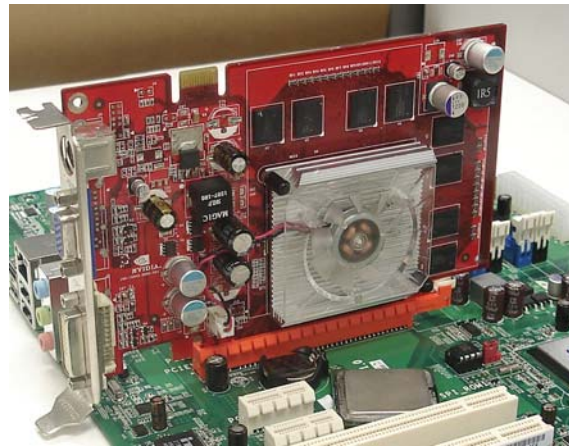


1. For some add-on cards, for example graphics adapters and network adapters, you have to install drivers and software before you can begin using the add-on card.

2. The onboard PCI interface does not support 64-bit SCSI cards.

Installing the Motherboard

Connecting Optional Devices

Refer to the following for information on connecting the motherboard's optional devices:

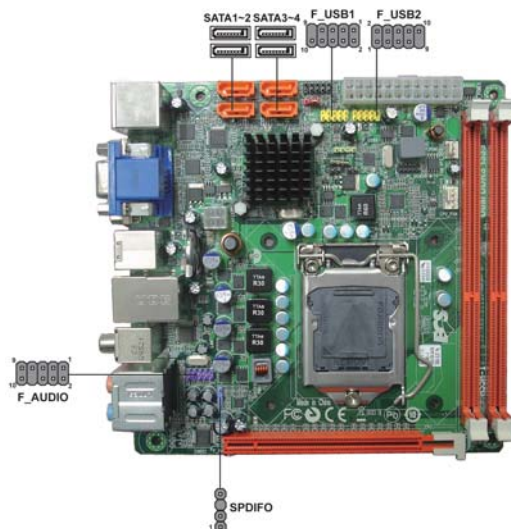

SATA1~4: Serial ATA connectors

These connectors are used to support the new Serial ATA devices for the highest data transfer rates (3.0 Gb/s), simpler disk drive cabling and easier PC assembly. It eliminates limitations of the current Parallel ATA interface. But maintains register compatibility and software compatibility with Parallel ATA.

Pin	Signal Name	Pin	Signal Name
1	Ground	2	TX+
3	TX-	4	Ground
5	RX-	6	RX+
7	Ground	-	-

F_AUDIO: Front Panel Audio header for Azalia

This header allows the user to install auxiliary front-oriented microphone and line-out ports for easier access.

Pin	Signal Name	Pin	Signal Name
1	PORT 1L	2	AUD_GND
3	PORT 1R	4	PRESENCE#
5	PORT 2R	6	PORT1_JD
7	AUD_GND	8	KEY
9	PORT 2L	10	PORT2_JD

F_USB1~2: Front Panel USB headers

The motherboard has four USB ports installed on the rear edge I/O port array. Additionally, some computer cases have USB ports at the front of the case. If you have this kind of case, use auxiliary USB connector to connect the front-mounted ports to the motherboard.

Pin	Signal Name	Function
1	USBPWR	Front Panel USB Power
2	USBPWR	Front Panel USB Power
3	USB_FP_P0-	USB Port 0 Negative Signal
4	USB_FP_P1-	USB Port 1 Negative Signal
5	USB_FP_P0+	USB Port 0 Positive Signal
6	USB_FP_P1+	USB Port 1 Positive Signal
7	GND	Ground
8	GND	Ground
9	Key	No pin
10	USB_FP_OC0	Overcurrent signal



Please make sure that the USB cable has the same pin assignment as indicated above. A different pin assignment may cause damage or system hang-up.

SPDIFO: SPDIF out header

This is an optional header that provides an S/PDIF (Sony/Philips Digital Interface) output to digital multimedia device through optical fiber or coaxial connector.

Pin	Signal Name	Function
1	SPDIF	SPDIF digital output
2	+5VA	5V analog Power
3	Key	No pin
4	GND	Ground

Installing a SATA Hard Drive

This section describes how to install SATA hard drives.

About SATA Connectors

Your motherboard features four SATA connectors supporting a total of four drives. SATA refers to Serial ATA (Advanced Technology Attachment) is the standard interface for the IDE hard drives which are currently used in most PCs. These connectors are well designed and will only fit in one orientation. Locate the SATA connectors on the motherboard and follow the illustration below to install the SATA hard drives.

Installing Serial ATA Hard Drives

To install the Serial ATA (SATA) hard drives, use the SATA cable that supports the Serial ATA protocol. This SATA cable comes with an SATA power cable. You can connect either end of the SATA cable to the SATA hard drive or the connector on the motherboard.



SATA cable (optional)



SATA power cable (optional)

Refer to the illustration below for proper installation:


- 1 Attach either cable end to the connector on the motherboard.
- 2 Attach the other cable end to the SATA hard drive.
- 3 Attach the SATA power cable to the SATA hard drive and connect the other end to the power supply.




Installing the Motherboard

Connecting I/O Devices

The backplane of the motherboard has the following I/O ports:

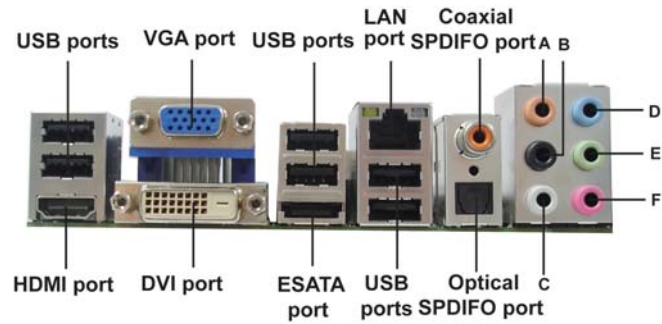

- HDMI port** Connect the HDMI port to the HDMI devices.
- DVI Port** Use the DVI port to connect the monitor.
- VGA Port** Connect your monitor to the VGA port.
- LAN Ports** Connect RJ-45 jacks to LAN ports to connect your computer to the Network.
- USB Ports** Use the USB ports to connect USB devices.
- Coaxial/Optical SPDIF Output** This jack connects to external optical/coaxial digital audio output devices.
- ESATA Port** Use this port to connect to external SATA boxes.

 Before connecting the eSATA cables, make sure to turn off the power of the external enclosure.

Audio Ports This motherboard may adopt 8-channel audio ports that correspond to the A,B, C, and E port respectively. In addition, all of the 3 ports, B, C, and E provide users with both right & left channels individually. Users please refer to the following note for specific port function definition.

A: Center & Woofer	D: Line-in
B: Back Surround	E: Front Out
C: Side Surround	F: Mic_in Rear


The above port definition can be changed to audio input or audio output by changing the driver utility setting.

Installing the Motherboard

Connecting Case Components


After you have installed the motherboard into a case, you can begin connecting the motherboard components. Refer to the following:

- 1 Connect the CPU cooling fan cable to **CPU_FAN**.
- 2 Connect the standard power supply connector to **ATX_POWER**.
- 3 Connect the case switches and indicator LEDs to the **F_PANEL**.
- 4 Connect the system cooling fan connector to **SYS_FAN**.
- 5 Connect the auxiliary case power supply connector to **ATX12V4P**.
- 6 Connect the case speaker cable to **SPK**.

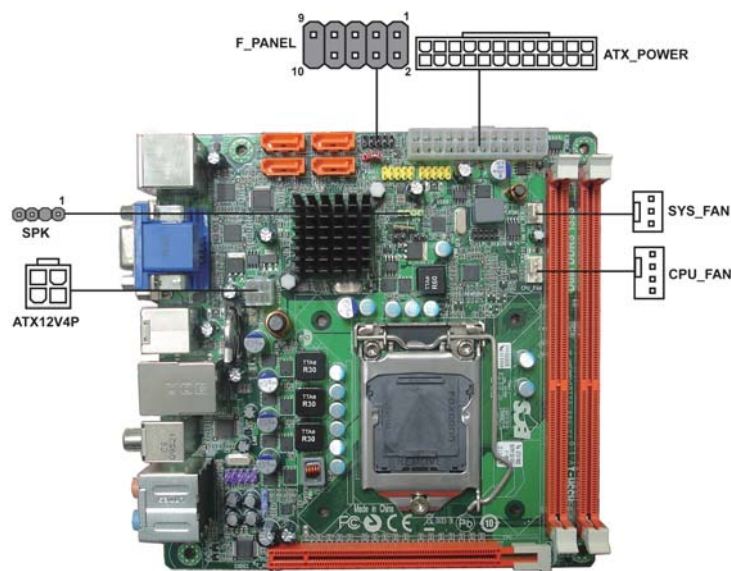

Connecting 24-pin power cable

The ATX_POWER 24-pin connector allows you to connect to ATX v2.x power supply.

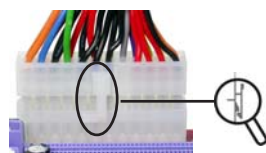

24-pin power cable


With ATX v2.x power supply, users please note that when installing 24-pin power cable, the latches of power cable and the ATX_POWER match perfectly.

Installing the Motherboard



Connecting 4-pin power cable

The ATX12V4P power connector is used to provide power to the CPU.

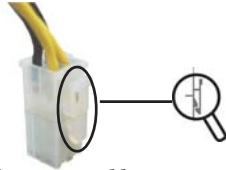

4-pin power cable

When installing 4-pin power cable, the latches of power cable and the ATX12V4P match perfectly.

CPU_FAN: CPU Cooling FAN Power Connector

Pin	Signal Name	Function
1	GND	System Ground
2	+12V	Power +12V
3	Sense	Sensor
4	PWM	PWM



Users please note that the fan connector supports the CPU cooling fan of 1.1A ~ 2.2A (26.4W max) at +12V.

ATX_POWER: ATX 24-pin Power Connector

Pin	Signal Name	Pin	Signal Name
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	Ground	15	Ground
4	+5V	16	PS_ON
5	Ground	17	Ground
6	+5V	18	Ground
7	Ground	19	Ground
8	PWRGD	20	-5V
9	+5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	Ground

SYS_FAN: Cooling FAN Power Connector

Pin	Signal Name	Function
1	GND	System Ground
2	+12V	Power +12V
3	Sense	Sensor

SPK: Internal speaker


Pin	Signal Name
1	VCC
2	Key
3	NC
4	Signal

ATX12V4P: ATX 12V Power Connector

Pin	Signal Name
1	Ground
2	Ground
3	+12V
4	+12V

Front Panel Header

The front panel header (F_PANEL) provides a standard set of switch and LED headers commonly found on ATX or micro-ATX cases. Refer to the table below for information:

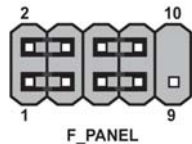

Pin	Signal	Function	Pin	Signal	Function
1	HD_LED_P	Hard disk LED (+)	2	FP PWR/SLP	*MSG LED (+)
3	HD_LED_N	Hard disk LED (-)	4	FP PWR/SLP	*MSG LED (-)
5	RST_SW_N	Reset Switch (-)	6	PWR_SW_P	Power Switch (+)
7	RST_SW_P	Reset Switch (+)	8	PWR_SW_N	Power Switch (-)
9	RSVD	Reserved	10	Key	No pin

** MSG LED (dual color or single color)*

Hard Drive Activity LED

Connecting pins 1 and 3 to a front panel mounted LED provides visual indication that data is being read from or written to the hard drive. For the LED to function properly, an IDE drive should be connected to the onboard IDE interface. The LED will also show activity for devices connected to the SCSI (hard drive activity LED) connector.

Power/Sleep/Message waiting LED

Connecting pins 2 and 4 to a single or dual-color, front panel mounted LED provides power on/off, sleep, and message waiting indication.

Reset Switch

Supporting the reset function requires connecting pins 5 and 7 to a momentary-contact switch that is normally open. When the switch is closed, the board resets and runs POST.

Power Switch

Supporting the power on/off function requires connecting pins 6 and 8 to a momentary-contact switch that is normally open. The switch should maintain contact for at least 50 ms to signal the power supply to switch on or off. The time requirement is due to internal de-bounce circuitry. After receiving a power on/off signal, at least two seconds elapses before the power supply recognizes another on/off signal.

This concludes Chapter 2. The next chapter covers the BIOS.

Chapter 3

Using BIOS

About the Setup Utility

The computer uses the latest “American Megatrends Inc.” BIOS with support for Windows Plug and Play. The CMOS chip on the motherboard contains the ROM setup instructions for configuring the motherboard BIOS.

The BIOS (Basic Input and Output System) Setup Utility displays the system’s configuration status and provides you with options to set system parameters. The parameters are stored in battery-backed-up CMOS RAM that saves this information when the power is turned off. When the system is turned back on, the system is configured with the values you stored in CMOS.

The BIOS Setup Utility enables you to configure:

- Hard drives, diskette drives and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power Management features

The settings made in the Setup Utility affect how the computer performs. Before using the Setup Utility, ensure that you understand the Setup Utility options.

This chapter provides explanations for Setup Utility options.

The Standard Configuration

A standard configuration has already been set in the Setup Utility. However, we recommend that you read this chapter in case you need to make any changes in the future.

This Setup Utility should be used:

- when changing the system configuration
- when a configuration error is detected and you are prompted to make changes to the Setup Utility
- when trying to resolve IRQ conflicts
- when making changes to the Power Management configuration
- when changing the password or making other changes to the Security Setup


Entering the Setup Utility

When you power on the system, BIOS enters the Power-On Self Test (POST) routines. POST is a series of built-in diagnostics performed by the BIOS. After the POST routines are completed, the following message appears:

Press DEL to enter SETUP

Using BIOS



Press the delete key to access the BIOS Setup Utility.

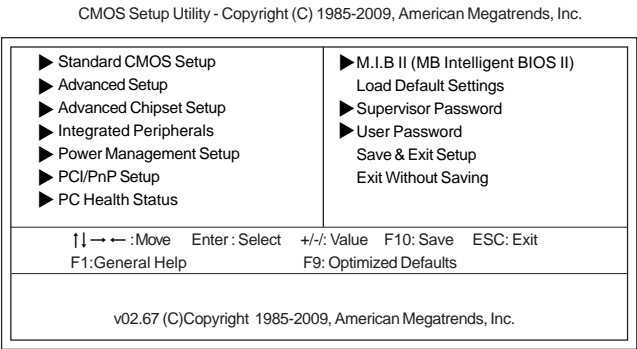

Resetting the Default CMOS Values

When powering on for the first time, the POST screen may show a “CMOS Settings Wrong” message. This standard message will appear following a clear CMOS data at factory by the manufacturer. You simply need to Load Default Settings to reset the default CMOS values.

Note: Changes to system hardware such as different CPU, memories, etc. may also trigger this message.

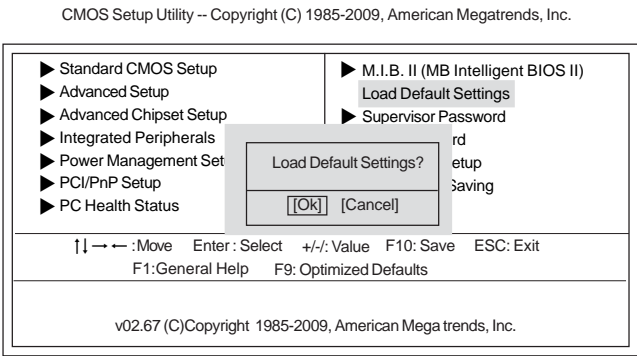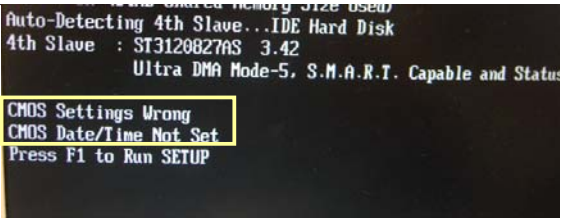

Using BIOS

Using BIOS

When you start the Setup Utility, the main menu appears. The main menu of the Setup Utility displays a list of the options that are available. A highlight indicates which option is currently selected. Use the cursor arrow keys to move the highlight to other options. When an option is highlighted, execute the option by pressing <Enter>.

Some options lead to pop-up dialog boxes that prompt you to verify that you wish to execute that option. Other options lead to dialog boxes that prompt you for information.

Some options (marked with a triangle ►) lead to submenus that enable you to change the values for the option. Use the cursor arrow keys to scroll through the items in the submenu.

In this manual, default values are enclosed in parenthesis. Submenu items are denoted by a triangle ►.



The default BIOS setting for this motherboard apply for most conditions with optimum performance. We do not suggest users change the default values in the BIOS setup and take no responsibility to any damage caused by changing the BIOS settings.

BIOS Navigation Keys

The BIOS navigation keys are listed below:

KEY	FUNCTION
ESC	Exits the current menu
↑↓←→	Scrolls through the items on a menu
+/-/	Modifies the selected field's values
Enter	Select
F9	Loads an optimized setting for better performance
F10	Saves the current configuration and exits setup
F1	Displays a screen that describes all key functions

Using BIOS



For the purpose of better product maintenance, we reserve the right to change the BIOS items presented in the manual. The BIOS setup screens shown in this chapter are for reference only. Please visit our website for updated manual.

Standard CMOS Setup

This option displays basic information about your system.

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
Standard CMOS Setup

Date (www mm:dd:yy)	Wed 12/30/2009	Help Item
Time (hh:mm:ss)	14 : 19 : 47	
▶ SATA1	Not Detected	Use [ENTER], [TAB] or [SHIFT-TAB] to select a field. Use [+] or [-] to configure system Date.
▶ SATA2	Not Detected	
▶ SATA3	Not Detected	
▶ SATA4	Not Detected	
▶ ESATA	Not Detected	
IDE BusMaster	Enabled	

↑↓ → ← : Move Enter : Select +/- : Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

Date & Time

The Date and Time items show the current date and time on the computer. If you are running a Windows OS, these items are automatically updated whenever you make changes to the Windows Date and Time Properties utility.

► SATA1~4/ESATA

This motherboard supports four SATA channels and each channel allows one SATA device to be installed. Use these items to configure each device on the SATA channel.

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
SATA1

SATA1		Help Item
Device : Not Detected		Select the type of device connected to the system.
Type	Auto	
LBA/Large Mode	Auto	
Block (Multi-Sector Transfer)	Auto	
PIO Mode	Auto	
DMA Mode	Auto	
S.M.A.R.T.	Auto	
32Bit Data Transfer	Enabled	

↑↓ → ← : Move Enter : Select +/- : Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

Type (Auto)

Use this item to configure the type of the IDE device that you specify. If the feature is enabled, it will enhance hard disk performance by reading or writing more data during each transfer.

LBA/Large Mode (Auto)

Use this item to set the LBA/Large mode to enhance hard disk performance by optimizing the area the hard disk is visited each time.

Block (Multi-Sector Transfer) (Auto)

If the feature is enabled, it will enhance hard disk performance by reading or writing more data during each transfer.

PIO Mode (Auto)

Use this item to set the PIO mode to enhance hard disk performance by optimizing the hard disk timing.

DMA Mode (Auto)

DMA capability allows users to improve the transfer-speed and data-integrity for compatible IDE devices.

S.M.A.R.T. (Auto)

The S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) system is a diagnostics technology that monitors and predicts device performance. S.M.A.R.T. software resides on both the disk drive and the host computer.

32Bit Data Transfer (Enabled)

Use this item to enable or disable 32Bit Data Transfer.

Press <Esc> to return to the Standard CMOS Setup page.

IDE BusMaster (Enabled)

This item enables or disables the DMA under DOS mode. We recommend you to leave this item at the default value.

Press <Esc> to return to the main menu setting page.

Using BIOS

Advanced Setup

This page sets up more advanced information about your system. Handle this page with caution. Any changes can affect the operation of your computer.

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
Advanced Setup

Thermal Management	Enabled	Help Item
TM Status	TM1/TM2	CPU Thermal Monitor
Limit CPUID MaxVal	Disabled	
Enhanced Halt (C1E)	Enabled	
Intel XD Bit	Disabled	
Intel VT	Enabled	
Intel EIST	Enabled	
Intel (R) HT Technology	Enabled	
Intel (R) TurboMode tech	Enabled	
Quick Power on Self Test	Enabled	
Boot Up Numlock Status	On	
APIC Mode	Enabled	
1st Boot Device	Hard Drive	
2nd Boot Device	CD/DVD	
3rd Boot Device	Removable Dev.	
Boot Other Device	Yes	
ECS eJFFY Function	Disabled	

↑↓ → ←: Move Enter: Select +/-: Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

Thermal Management (Enabled)

This item displays CPU’s temperature and enables you to set a safe temperature to Prescott CPU.

TM Status (TM1/TM2)

This item shows TM function status if CPU can support TM function.

Limit CPUID MaxVal (Disabled)

Use this item to enable or disable the Max CPU ID value limit. When supports Prescott and LGA775 CPUs, enables this to prevent the system from “rebooting” when trying to install Windows NT 4.0.

Enhanced Halt (C1E) (Enabled)

This item enables or disables enhanced halt (C1E).

Intel XD Bit (Disabled)

This item allows users to enable or disable the Intel XD bit.

Intel VT (Enabled)

When enabled, a VMM can utilize the additional hardware capabilities provided by Vandevoort Technology.

Intel EIST (Enabled)

This item allows users to enable or disable the EIST (Enhanced Intel SpeedStep technology).

Intel (R) HT Technology (Enabled)

This item enables or disables Intel HT technology support.

Using BIOS

Intel (R) TurboMode tech (Enabled)

This item enables or disables Intel TurboMode Technology support.

Quick Power on Self Test (Enabled)

Enable this item to shorten the power on testing (POST) and have your system start up faster. You might like to enable this item after you are confident that your system hardware is operating smoothly.

Boot Up Numlock Status (On)

This item defines if the keyboard Num Lock key is active when your system is started.

APIC Mode (Enabled)

This item allows you to enable or disable the APIC (Advanced Programmable Interrupt Controller) mode. APIC provides symmetric multi-processing (SMP) for systems, allowing support for up to 60 processors.

1st/2nd/3rd Boot Device (Hard Drive/CD/DVD/Removable Dev.)

Use this item to determine the device order the computer used to look for an operating system to load at start-up time. The devices showed here will be different depending on the exact devices installed on your motherboard.

Boot Other Device (Yes)

When enabled, the system searches all other possible locations for an operating system if it fails to find one in the devices specified under the First, Second and Third boot devices.

ECS eJIFFY Function (Disabled)

Use this item to enable or disable the ECS eJIFFY Function. eJIFFY is ECS unique software program for the quick access to the internet without entering O.S. Please refer to Chapter 5 to know more about eJIFFY.

Press <Esc> to return to the main menu setting page.

Advanced Chipset Setup

This page sets up more advanced information about your system. Handle this page with caution. Any changes can affect the operation of your computer.

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
Advanced Chipset Setup

PAVP Mode	Lite	Help Item
Share Memory Size	64MB	GMCH Protected Audio Video Path (PAVP) BIOS support.
DVMT Memory	256MB	
Memory Remap Feature	Enabled	
HDMI Audio	Enabled	

↑↓→← : Move Enter : Select +/- : Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

PAVP Mode (Lite)

This item allows you to select the PAVP (Protected Audio-Video Path) mode. PAVP supports secure playback of Intel HD Audio and Video content.

Share Memory Size (64MB)

This item lets you allocate a portion of the main memory for the onboard VGA display application.

DVMT Memory (256MB)

When set to Fixed Mode, the graphics driver will reserve a fixed portion of the system memory as graphics memory, according to system and graphics requirements.

Memory Remap Feature (Enabled)

This item allows you to remap the overlapped PCI memory above the total physical memory if you have a 64 bit OS and 8 GB of RAM.

HDMI Audio (Enabled)

This item is used to enable or disable the NB HDMI audio support.

Press <Esc> to return to the main menu setting page.

Integrated Peripherals

This page sets up some parameters for peripheral devices connected to the system.

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
Integrated Peripherals

		Help Item
SATA Configuration	IDE	
Onboard SATA Mode	Enhanced	IDE
Onboard AUDIO Function	Enabled	AHCI
Onboard LAN Function	Enabled	Disabled
Onboard LAN Boot ROM	Disabled	
USB Functions	Enabled	
Legacy USB Support	Enabled	

↑↓ → ← : Move Enter : Select +/- : Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

SATA Configuration (IDE)

Use this item to show the Serial ATA Configuration.

Onboard SATA Mode (Enhanced)

Use this item to select the mode of the Serial ATA.

Onboard Audio Function (Enabled)

Use this item to enable or disable the onboard audio device.

Onboard LAN Function (Enabled)

Use this item to enable or disable the onboard LAN function.

Onboard LAN Boot ROM (Disabled)

Use this item to enable or disable the booting from the onboard LAN or a network add-in card with a remote boot ROM installed.

USB Functions (Enabled)

Use this item to enable or disable the USB function.

Legacy USB Support (Enabled)

Use this item to enable or disable support for legacy USB device.

Using BIOS

Power Management Setup

This page sets up some parameters for system power management operation.

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
Power Management Setup

ACPI Suspend Type	S3	Help Item
PWRON After PWR-Fail	Power Off	Select the ACPI state used for System Suspend.
Resume By PCI-E/Lan PME	Disabled	
Resume by USB (S3)	Disabled	
Resume on RTC Alarm	Disabled	
Intel(R) C-STATE tech	Enabled	
C3 State	ACPI C3	
C6 State	Enabled	
C1 Auto Demotion	Enabled	
C3 Auto Demotion	Enabled	
ACPI T State	Enabled	
EUP Support	Enabled	

↑↓ → ← : Move Enter: Select +/-: Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

ACPI Suspend Type (S3)

Use this item to define how your system suspends. In the default, S3, the suspend mode is a suspend to RAM, i.e, the system shuts down with the exception of a refresh current to the system memory.

PWRON After PWR-Fail (Power Off)

This item enables your computer to automatically restart or return to its operating status.

Resume By PCI-E/Lan PME (Disabled)

These items specify whether the system will be awakened from power saving modes when activity or input signal of the specified hardware peripheral or component is detected.

Resume by USB (S3) (Disabled)

This item allows you to enable/disable the USB device wakeup function from S3/S4 mode.

Resume on RTC Alarm (Disabled)

The system can be turned off with a software command. If you enable this item, the system can automatically resume at a fixed time based on the system RTC (realtime clock). Use the items below this one to set the date and time of the wake-up alarm. You must use an ATX power supply in order to use this feature.

Intel(R) C-STATE tech (Enabled)

C State: CPU idle is set to C2/C3/C4.

C3 State (ACPIC3)

Nehalem C state action select.

C6 State (Enabled)

Nehalem C state action select.

Using BIOS

C1 Auto Demotion (Enabled)

When enable, CPU will conditionally demote C3/C6/C7 requests to C1 based on uncore auto-demote information.

C3 Auto Demotion (Enabled)

When enable, CPU will conditionally demote C6/C7 requests to C3 based on uncore auto-demote information.

ACPI T State (Enabled)

Report processor throttling in ACPI

EUP Support (Enabled)

When enabled, system can not resume by some devices (PCI/PCIE/PME/Ring/RTC,etc) at S5 state. You can use this item to save power.

Press <Esc> to return to the main menu setting page.

PCI/PnP Setup

This page sets up some parameters for devices installed on the PCI bus and those utilizing the system plug and play capability.

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
PCI/PnP Setup

Init Display First	PCI	Help Item
		Select which graphics controller to use as the primary boot device.

↑↓ → ← : Move Enter : Select +/- : Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

Init Display First (PCI)

Use this item to select which graphics controller to use as the primary boot devices.

Press <Esc> to return to the main menu setting page.

Using BIOS

PC Health Status

On motherboards support hardware monitoring, this item lets you monitor the parameters for critical voltages, temperatures and fan speeds.

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
PC Health Status

-- System Hardware Monitor --		Help Item
▶ Smart Fan Function	Press Enter	
CPU Temperature	: 38°C/100°F	
System Temperature	: 34°C/93°F	
CPU Fan Speed	: 978 RPM	
CPU Vcore	: 1.164 V	
VDIMM	: 1.524 V	
VAXG	: 1.368 V	
Case Open Warning	Disabled	
Chassis Opened	No	

↑↓ → ← : Move Enter : Select +/- : Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

▶ Smart Fan Function (Press Enter)

Scroll to this item and press <Enter> to view the following screen:

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
Smart Fan Function

		Help Item
CPU SMART FAN Control	Enabled	
SMART Fan Mode	Normal	
CPU SMART Fan start PWM	56	
CPU SMART Fan start TEMP (° C)	32	
DeltaT	+3	
SMART Fan Slope PWM value	4 PWM value/° C	
CPU FAN Full Limit Temp	81° C	
		Options
		Disabled
		Enabled

↑↓ → ← : Move Enter : Select +/- : Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

CPU SMART FAN Control (Enabled)

This item allows you to enable/disable the control of the CPU fan speed by changing the fan voltage.

SMART Fan Mode (Normal)

This item allows you to select the fan mode (Normal, Quiet, Silent, or Manual) for a better operation environment. If you choose Normal mode, the fan speed will be auto adjusted depending on the CPU temperature. If you choose Quiet mode, the fan speed will be auto minimized for quiet environment. If you choose Silent mode, the fan speed will be auto restricted to make system more quietly. If you choose Manual mode, the fan speed will be adjust depending on users' parameters.

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
Smart Fan Function

CPU SMART FAN Control Enabled SMART Fan Mode Quiet CPU SMART Fan start PWM 30 CPU SMART Fan start TEMP (° C) 29 DeltaT +3 SMART Fan Slope PWM value 5 PWM value/° C CPU FAN Full Limit Temp 74° C		Help Item Options Normal: auto adjusts depending on the CPU temperature. Quiet: auto minimizes fan speed for quiet environment operation. Silent: auto restricts fan speed to make system more quietly. Manual: the fan adjust depending on user's parameter.
--	--	---

↑↓ → ← : Move Enter: Select +/-: Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
Smart Fan Function

CPU SMART FAN Control Enabled SMART Fan Mode Silent CPU SMART Fan start PWM 10 CPU SMART Fan start TEMP (° C) 26 DeltaT +3 SMART Fan Slope PWM value 6 PWM value/° C CPU FAN Full Limit Temp 66° C		Help Item Options Normal: auto adjusts depending on the CPU temperature. Quiet: auto minimizes fan speed for quiet environment operation. Silent: auto restricts fan speed to make system more quietly. Manual: the fan adjust depending on user's parameter.
---	--	---

↑↓ → ← : Move Enter: Select +/-: Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

Using BIOS

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
Smart Fan Function

CPU SMART FAN Control	Enabled	<div>Help Item</div> <div>Options</div> <div>Normal: auto adjusts depending on the CPU temperature.</div> <div>Quiet: auto minimizes fan speed for quiet environment operation.</div> <div>Silent: auto restricts fan speed to make system more quietly.</div> <div>Manual: the fan adjust depending on user's parameter.</div>
SMART Fan Mode	Manual	
CPU SMART Fan start PWM	28	
CPU SMART Fan start TEMP (° C)	32	
DeltaT	+3	
SMART Fan Slope PWM value	4 PWM value/° C	
CPU FAN Full Limit Temp	57° C	
SYS SMART FAN Control	Disabled	

↑↓→← : Move Enter : Select +/-: Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

Press <Esc> to return to the Smart Fan Function page.

- System Component Characteristics**
- These items display the monitoring of the overall inboard hardware health events, such as System & CPU temperature, CPU & DIMM voltage, CPU & system fan speed,...etc.
- CPU Temperature
 - System Temperature
 - CPU Fan Speed
 - System Fan Speed
 - CPU Vcore
 - CPU VTT Voltage
 - VDIMM
 - PCH Voltage

Case Open Warning (Disabled)

This item enables or disables the warning if the case is opened up, and the item below indicates the current status of the case.

Chassis Opened (No)

This item indicates whether the case has been opened.

Press <Esc> to return to the main menu setting page.



ECS supports the latest PECI host technology. While using Core™ 2 Quad or Core™ 2 Duo CPU which supports PECI, the original images of the BIOS item “PC Health Status” and “Smart FAN Function” will be replaced by PECI mode and negative number. (The max data from PECI is zero.)

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.
PC Health Status

-=- System Hardware Monitor -=-		Help Item
▶ Smart Fan Function	Press Enter	
CPU Fan Speed	: 2509 RPM	
CPU Vcore	: 1.088 V	
VDIMM	: 1.824 V	
-=- PECI Mode -=-		
Offset to TCC Activation Temp. : -60		

↑↓ → ← : Move Enter : Select +/- : Value F10: Save ESC: Exit
F1: General Help F9: Load Default Settings

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.
Smart Fan Function

SMART Fan Control		Help Item
Disabled		Options
		Disabled
		Enabled

↑↓ → ← : Move Enter : Select +/- : Value F10: Save ESC: Exit
F1: General Help F9: Load Default Settings

Press <Esc> to return to the PC Health Status page.

Using BIOS

M.I.B. II (MB Intelligent BiosII)

This page enables you to set the clock speed and system bus for your system. The clock speed and system bus are determined by the kind of processor you have installed in your system.

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
M.I.B.II (MB Intelligent BIOS II)

Performance Level	Standard	Help Item
DRAM Frequency	Auto	Options
Configure DRAM Timing by SPD	Auto	Standard
Memory Hole	Disabled	Enhanced
DRAM Command Rate	Auto	
CPU Over-clocking Func:	Disabled	
PCIe Over-clocking Func:	Disabled	
Spread Spectrum	Enabled	
Auto Detect DIMM/PCI Clk	Enabled	
Voltage Function	Disabled	
<hr/>		
Intel (R) Core (TM) i5 CPU 661 @ 3.33GHz		
Ratio Status: Unlocked (Min: 09, Max: 25)		
Ratio Actual Value: 25		
Current Memory Frequency : 1333MHz		
Memory Current Type: 9-24-9-9-10-74-5-4-5-20		
CPU Vcore	: 1.164 V	
VDIMM	: 1.500 V	
VAXG	: 1.368 V	

↑↓ → ← :Move Enter:Select +/-:Value F10: Save ESC: Exit
F1:General Help F9: Optimized Defaults

Performance Level (Standard)

This item shows the performance level of the components, the options are: Standard and Enhanced.

DRAM Frequency (Auto)

This item enables users to adjust the DRAM frequency. The default setting is auto and we recommend users leave the setting unchanged. Modify it at will may cause the system to be unstable.

Configure DRAM Timing by SPD (Auto)

When this item is set to enable, the DDR timing is configured using SPD. SPD (Serial Presence Detect) is located on the memory modules, BIOS reads information coded in SPD during system boot up.

Memory Hole (Disabled)

This item allows users to enable or disable memory hole remapping.

DRAM Command Rate (Auto)

This item specifies the rate of the DRAM Command.

CPU Over-clocking Func (Disabled)

This item decides the CPU over-clocking function installed in your system. If the over-clocking fails, please turn off the system power. And then, hold the PageUp key (similar to the Clear CMOS function) and turn on the power, the BIOS will recover the safe default.

Using BIOS

PCIE Over-clocking Func (Disabled)

This item enables or disables the PCIE over-clocking function.

Spread Spectrum (Enabled)

If you enable spread spectrum, it can significantly reduce the EMI (Electro-Magnetic Interference) generated by the system.

Auto Detect DIMM/PCI Clk (Enabled)

When this item is enabled, BIOS will disable the clock signal of free DIMM/PCI slots.

Voltage Function (Disabled)

Use this item to enable or disable the Voltage Function. If enable, users can increase the hardware voltage through BIOS settings.

Intel (R) Core (TM) i5 CPU 661 @ 3.33GHz

This is display-only field and displays the information of the CPU installed in your computer.

Ratio Status/Ratio Actual Value (Unlocked/25)

These items show the locked/unlocked ratio status and the actual ratio of the CPU installed in your system.

Current Memory Frequency (1333MHz)

This item displays the current memory frequency.

Memory Current Type (9-24-9-9-10-74-5-4-5-20)

This item displays the current memory type.

CPU Vcore (1.164 V)

This item displays the current CPU voltage.

VDIMM (1.500 V)

This item displays the current DIMM voltage.

VAXG (1.368 V)

This item displays the current PCH voltage.

Press <Esc> to return to the main menu setting page.

Load Default Settings

This option opens a dialog box that lets you install stability-oriented defaults for all appropriate items in the Setup Utility. Select <OK> and then press <Enter> to install the defaults. Select <Cancel> and then press <Enter> to not install the defaults.

Supervisor Password

This page helps you install or change a password.

CMOS Setup Utility - Copyright (C) 1985-2009, American Megatrends, Inc.
Supervisor Password

Supervisor Password : Installed	Help Item
Change Supervisor Password Security Check	Install or Change the password.

↑↓→← : Move Enter: Select +/-: Value F10: Save ESC: Exit
F1: General Help F9: Optimized Defaults

Supervisor Password (Not Installed)

This item indicates whether a supervisor password has been set. If the password has been installed, *Installed* displays. If not, *Not Installed* displays.

Change Supervisor Password (Press Enter)

You can select this option and press <Enter> to access the sub menu. You can use the sub menu to change the supervisor password.

Security Check (Setup)

If you have installed password protection, this item defines if the password is required at system start up, or if it is only required when a user tries to enter the Setup Utility.

Press <Esc> to return to the main menu setting page.

User Password

This page helps you install or change a password.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.
User Password

User Password : Not Installed	Help Item
Change Supervisor Password Press Enter	

↑↓←→ : Move Enter : Select +/- : Value F10: Save ESC: Exit
F1: General Help F9: Load Default Settings

User Password (Not Installed)

This item indicates whether a user password has been set. If the password has been installed, *Installed* displays. If not, *Not Installed* displays.

Change Supervisor Password (Press Enter)

You can select this option and press <Enter> to access the sub menu. You can use the sub menu to change the supervisor password.

Press <Esc> to return to the main menu setting page.

Save & Exit Setup

Highlight this item and press <Enter> to save the changes that you have made in the Setup Utility and exit the Setup Utility. When the Save and Exit dialog box appears, select [OK] to save and exit, or select [Cancel] to return to the main menu.

Exit Without Saving

Highlight this item and press <Enter> to discard any changes that you have made in the Setup Utility and exit the Setup Utility. When the Exit Without Saving dialog box appears, select [OK] to discard changes and exit, or select [Cancel] to return to the main menu.



If you have made settings that you do not want to save, use the “Exit Without Saving” item and select [OK] to discard any changes you have made.

Using BIOS

Updating the BIOS

You can download and install updated BIOS for this motherboard from the manufacturer's Web site. New BIOS provides support for new peripherals, improvements in performance, or fixes for known bugs. Install new BIOS as follows:

- 1 If your motherboard has a BIOS protection jumper, change the setting to allow BIOS flashing.
- 2 If your motherboard has an item called Firmware Write Protect in Advanced BIOS features, disable it. (Firmware Write Protect prevents BIOS from being overwritten.)
- 3 Prepare a bootable device or create a bootable system disk. (Refer to Windows online help for information on creating a bootable system disk.)
- 4 Download the Flash Utility and new BIOS file from the manufacturer's Web site. Copy these files to the bootable device.
- 5 Turn off your computer and insert the bootable device in your computer. (You might need to run the Setup Utility and change the boot priority items on the Advanced BIOS Features Setup page, to force your computer to boot from the bootable device first.)
- 6 At the C:\ or A:\ prompt, type the Flash Utility program name and the file name of the new BIOS and then press <Enter>. Example: AFUDOS.EXE 040706.ROM
- 7 When the installation is complete, remove the bootable device from the computer and restart your computer. If your motherboard has a Flash BIOS jumper, reset the jumper to protect the newly installed BIOS from being overwritten. The computer will restart automatically.

This concludes Chapter 3. Refer to the next chapter for information on the software supplied with the motherboard.

Using BIOS

Chapter 4

Using the Motherboard Software

About the Software DVD-ROM/CD-ROM

The support software DVD-ROM/CD-ROM that is included in the motherboard package contains all the drivers and utility programs needed to properly run the bundled products. Below you can find a brief description of each software program, and the location for your motherboard version. More information on some programs is available in a README file, located in the same directory as the software. Before installing any software, always inspect the folder for files named README.TXT or something similar. These files may contain important information that is not included in this manual.



1. Never try to install all software from folder that is not specified for use with your motherboard.
2. The notice of Intel HD audio installation (optional): The Intel High Definition audio functionality unexpectedly quits working in Windows Server 2003 Service Pack 1 or Windows XP Professional x64 Edition. Users need to download and install the update packages from the Microsoft Download Center “before” installing HD audio driver bundled in the Driver disk. Please log on to <http://support.microsoft.com/default.aspx?scid=kb;en-us;901105#appliedto> for more information.

Auto-installing under Windows XP/Vista/7

The Auto-install DVD-ROM/CD-ROM makes it easy for you to install the drivers and software for your motherboard.



If the Auto-install DVD-ROM/CD-ROM does not work on your system, you can still install drivers through the file manager for your OS (for example, Windows Explorer). Refer to the Utility Folder Installation Notes later in this chapter.

The support software DVD-ROM/CD-ROM disc loads automatically under Windows XP/Vista/7. When you insert the DVD-ROM/CD-ROM disc in the DVD-ROM/CD-ROM drive, the autorun feature will automatically bring up the install screen. The screen has three buttons on it, Setup, Browse CD and Exit.



If the opening screen does not appear; double-click the file “setup.exe” in the root directory.

Using the Motherboard Software

Drivers Tab

Setup	Click the Setup button to run the software installation program. Select from the menu which software you want to install.
Browse CD	<p>The Browse CD button is the standard Windows command that allows you to open Windows Explorer and show the contents of the support disk.</p> <p>Before installing the software from Windows Explorer, look for a file named README.TXT or something similar. This file may contain important information to help you install the software correctly.</p> <p>Some software is installed in separate folders for different operating systems, such as Windows XP/Vista/7. Always go to the correct folder for the kind of OS you are using.</p> <p>In install the software, execute a file named SETUP.EXE by double-clicking the file and then following the instructions on the screen.</p>
Exit	The Exit button closes the Auto Setup window.

Utilities Tab

Lists the software utilities that are available on the disk.


Information Tab


Displays the path for all software and drivers available on the disk.

Running Setup

Follow these instructions to install device drivers and software for the motherboard:

1. Click **Setup**. The installation program begins:

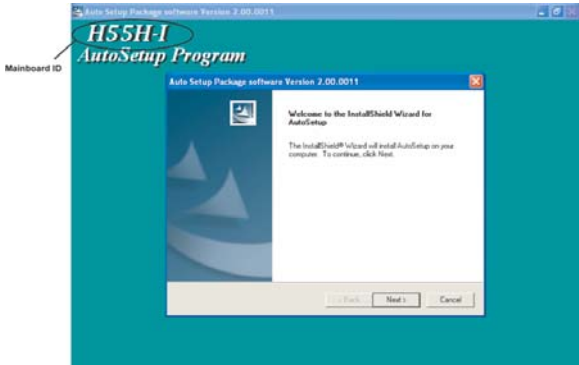


 The following screens are examples only. The screens and driver lists will be different according to the motherboard you are installing.


The motherboard identification is located in the upper left-hand corner.

Using the Motherboard Software

2. Click **Next**. The following screen appears:

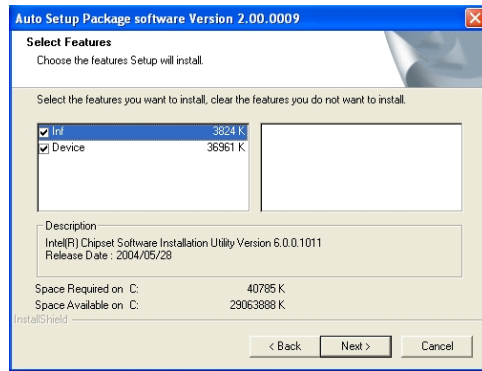

3. Check the box next to the items you want to install. The default options are recommended.
4. Click **Next** run the Installation Wizard. An item installation screen appears:

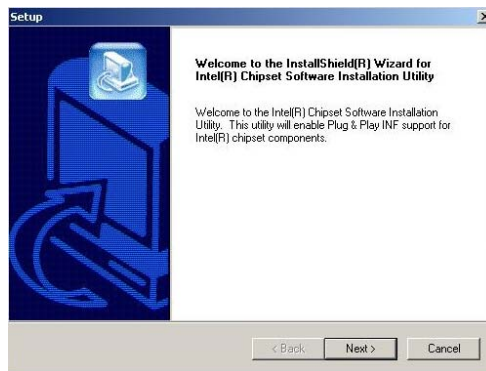

5. Follow the instructions on the screen to install the items.




Drivers and software are automatically installed in sequence. Follow the onscreen instructions, confirm commands and allow the computer to restart a few times to complete the installation.

Using the Motherboard Software



Windows Vista/7 will appear below UAC (User Account Control) message after the system restart. You must select “Allow” to install the next driver. Continue this process to complete the drivers installation.

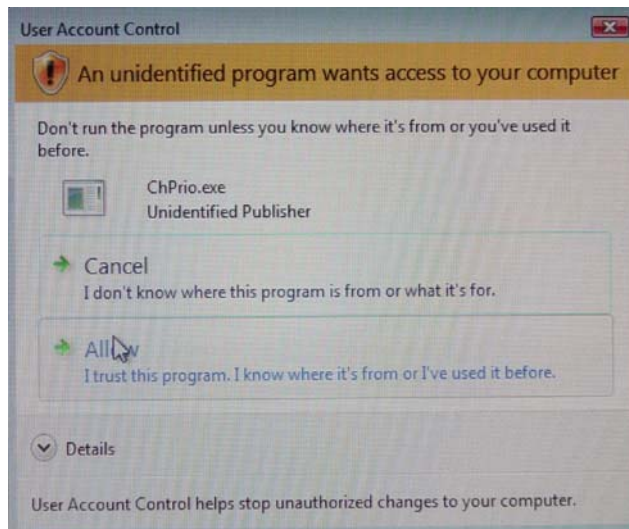

Manual Installation

Insert the disk in the DVD-ROM/CD-ROM drive and locate the PATH.DOC file in the root directory. This file contains the information needed to locate the drivers for your motherboard.

Look for the chipset and motherboard model; then browse to the directory and path to begin installing the drivers. Most drivers have a setup program (SETUP.EXE) that automatically detects your operating system before installation. Other drivers have the setup program located in the operating system subfolder.

If the driver you want to install does not have a setup program, browse to the operating system subfolder and locate the readme text file (README.TXT or README.DOC) for information on installing the driver or software for your operating system.

Utility Software Reference

All the utility software available from this page is Windows compliant. They are provided only for the convenience of the customer. The following software is furnished under license and may only be used or copied in accordance with the terms of the license.



These software(s) are subject to change at anytime without prior notice. Please refer to the support disk for available software.

This concludes Chapter 4.

Using the Motherboard Software

Chapter 5

Setting Up eJIFFY

Introduction

eJIFFY is a fast boot program under Linux. Instead of waiting Windows O.S to start execution, eJIFFY is ready to provide users the instant enjoyment on web browsing, photo review and online chat just within several seconds after boot up.



Note: eJIFFY is ECS *optional* feature utility corresponding to the DVD activation and BIOS setup. Please check the hard copy user's guide or product color-box to see if the model has embodied eJIFFY feature. (eJIFFY icon on color-box



Version: 4.0


Setting Up eJIFFY

Installation and BIOS Setup

DVD Activation

Finish the DVD utility setup, and then set the BIOS to complete eJIFFY activation.

1. Insert ECS software utility DVD and enter below “Utilities” screen. Click eJIFFY feature item to install.

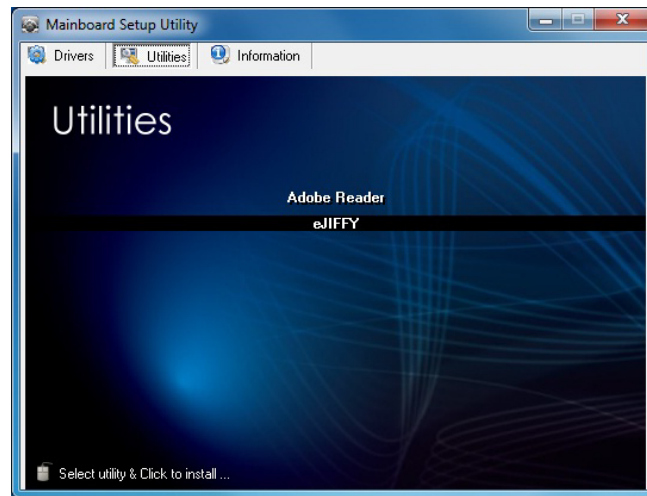

2. Follow the onscreen instructions to finish eJIFFY setup.



Setting Up eJIFFY

3. After setting up eJIFFY under Windows, you can switch eJIFFY display/keyboard language from English to your local language. The changes will be applied after rebooting.



Note: The keyboard language selection list offers several more regional keyboard setups to switch with the default English typing. Please refer to the usage FAQ for more tips.

Setting Up eJIFFY

4. Restart your computer after eJIFFY installation. Press or click the BIOS Setup button on the post screen to enter the BIOS setup page after boot up.



5. And then enter the *Advanced Setup* page to enable the item *ECS eJIFFY Function*. Press F10 to save the configuration and exit. Restart your computer.




Note: 1. eJIFFY is available in SATA/IDE/AHCI mode. It does not support RAID configuration and the onboard 34-pin floppy drives.
2. Please refer to ECS website for new eJIFFY application updates.

Setting Up eJIFFY

Entering eJIFFY

The post screen appears within several seconds after boot up and it has three buttons on it, Operating system, eJIFFY and BIOS Setup.

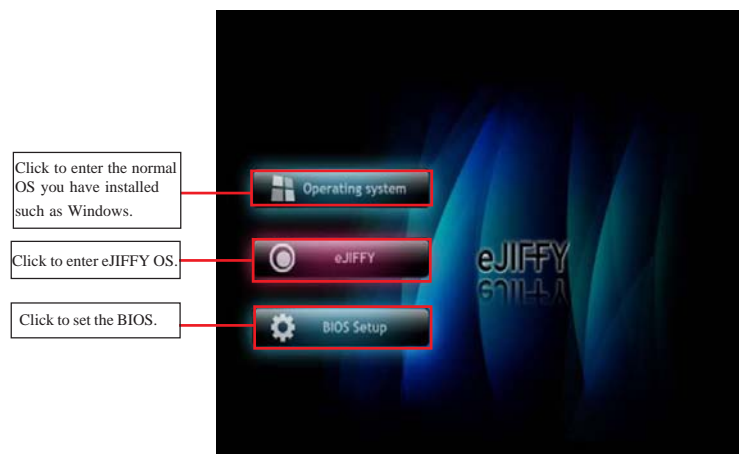

If you click eJIFFY, the following screen will appear. And If you make no choice it will enter the normal OS automatically after ten seconds.



Setting Up eJIFFY

Feature Icons

The following illustration shows the main feature icons that eJIFFY provides on the menu.




Setting Up eJIFFY


Usage FAQ



Language Control Panel: Besides setting English as the default interface, eJIFFY offers multi-language displays and keyboard settings for language-switch. Open the language control panel to select a preferable language setting.

Keyboard Language Setup

Step1. Click  to open the language control panel.

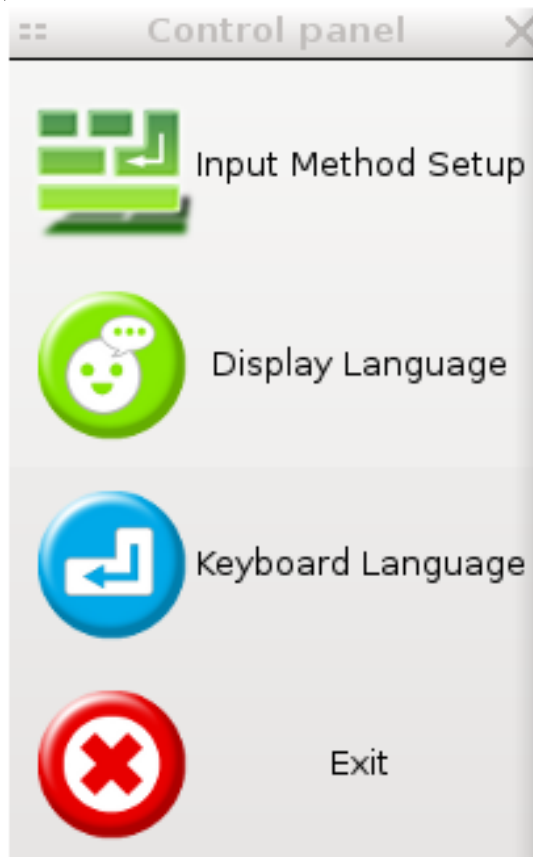


Setting Up eJIFFY

Step 2: Click “Keyboard Language” icon  to open the keyboard selection

list, which offers several regional keyboard settings besides default English keyboard.

Step 3: Click the selected keyboard language (e.g. French) and press “OK”.

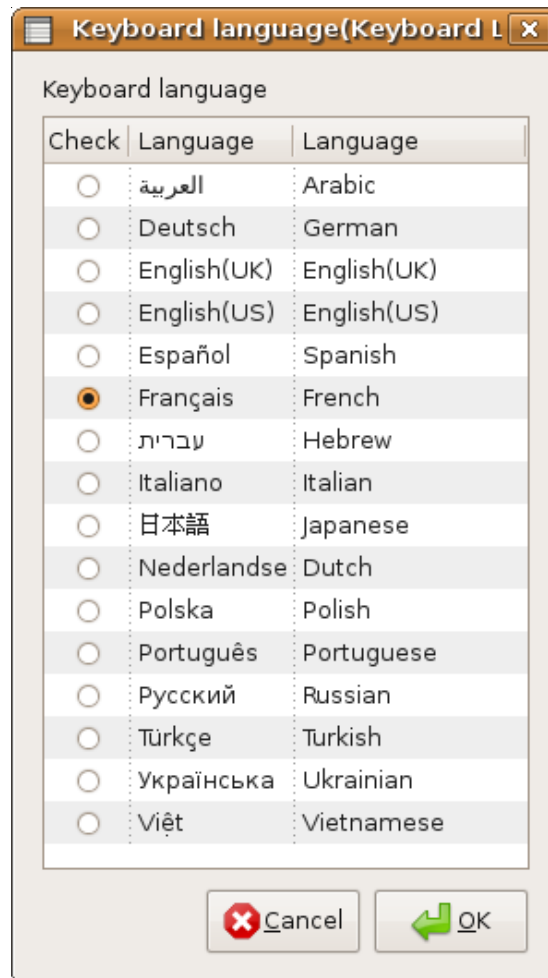

Setting Up eJIFFY


Tips for Language Switch:

Tip 1: Click “Change Keyboard” icon  to switch the typing language.




The typing language on text box will switch to the selected one:





Click  again to switch to English typing back.


Tip 2. If you use the default English keyboard, eJIFFY still offers other language inputs to switch with English.

Click  to enable all possible language inputs you want to apply, and click “Apply”:

Setting Up eJIFFY

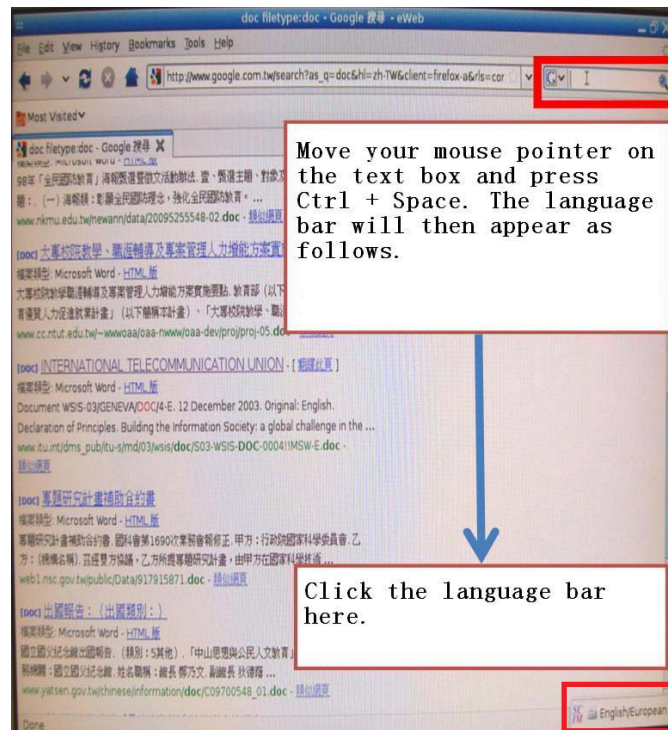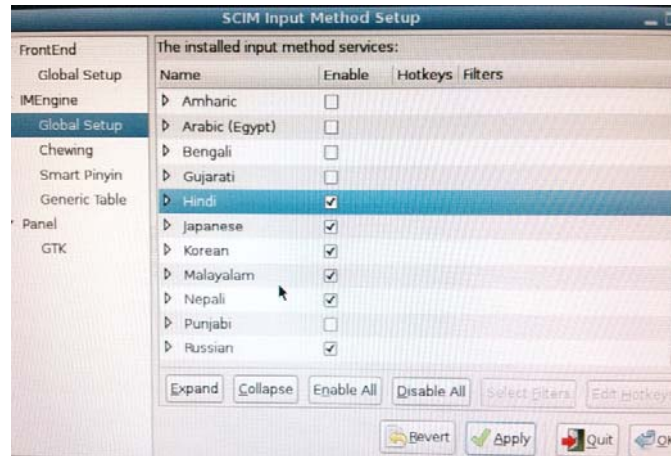


Setting Up eJIFFY

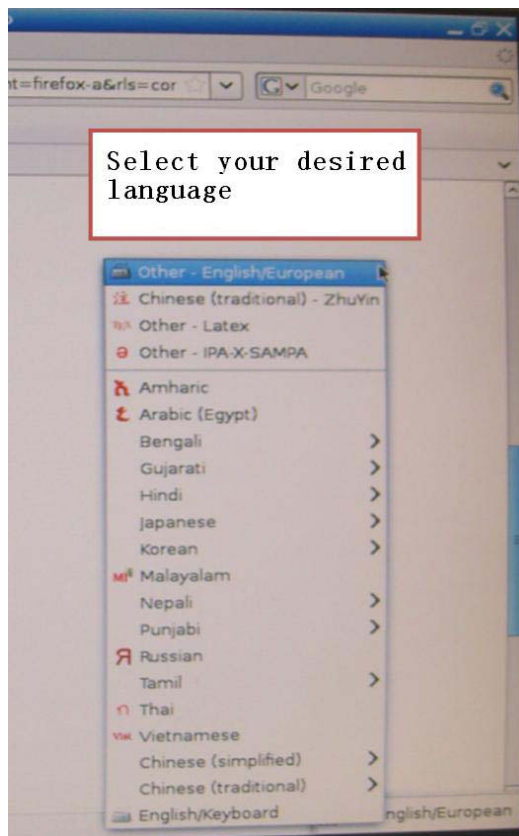


Setting Up eJIFFY

Tip 3. How to change display language?

Open the Language Control Panel and click  to show the display language

list. Check your desired display language. Your selected display language will be applied after rebooting.

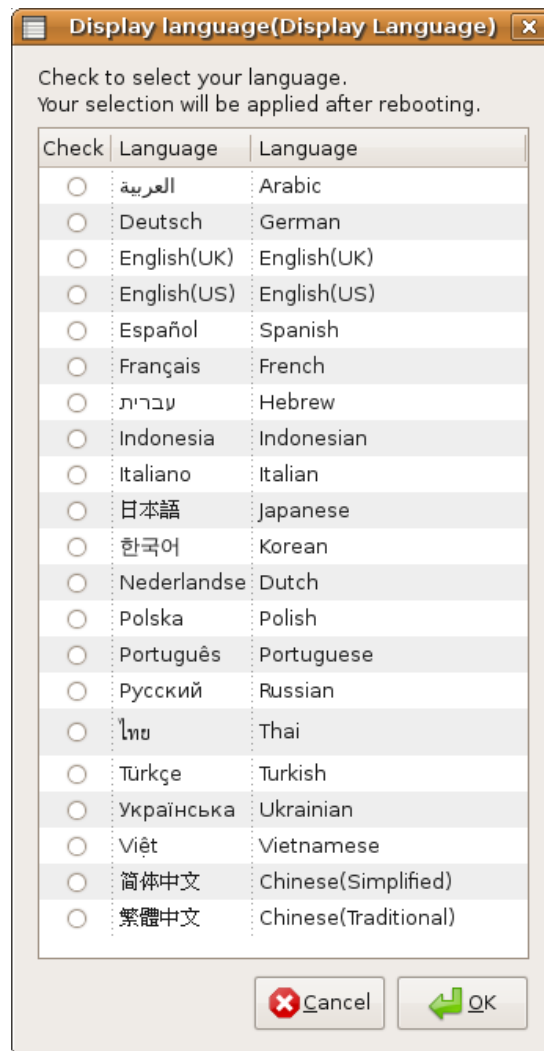

Setting Up eJIFFY



eWeb: Firefox for web browsing/webmail and watching flash video.

Q1: How to download files to hard disk through eWeb?

Click on the file link directly. Then select “Save File” in the pop-up window.




- Note:
1. Before downloading files, please “mount” the storage devices to make sure the device is connected with eJIFFY interface. (Please refer to the usage FAQ to mount devices)
 2. eWeb does not support Office Viewer/Reader/Writer format under eJIFFY interface. Please enter the Operating System to open Office files.
 3. eWeb supports to open video/audio files online in Flash player format. Due to firefox limitation, the browser does not support files in Real player or Media player formats.


Setting Up eJIFFY

Q2: How to save image file through eWeb?

1. Select the image you want to save and press the right key of your mouse to show the menu, then click the option “Save Image As” from the menu.

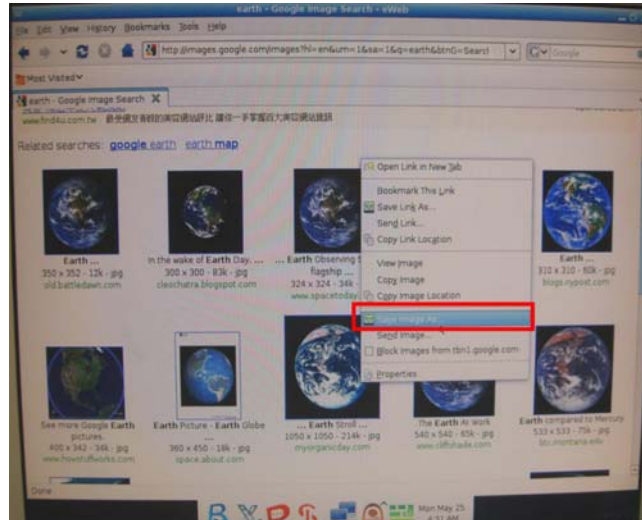

2. Then the “Save Image” window appears. You may rename the image file in the “Name” column and save the file in a folder as the following picture shows.

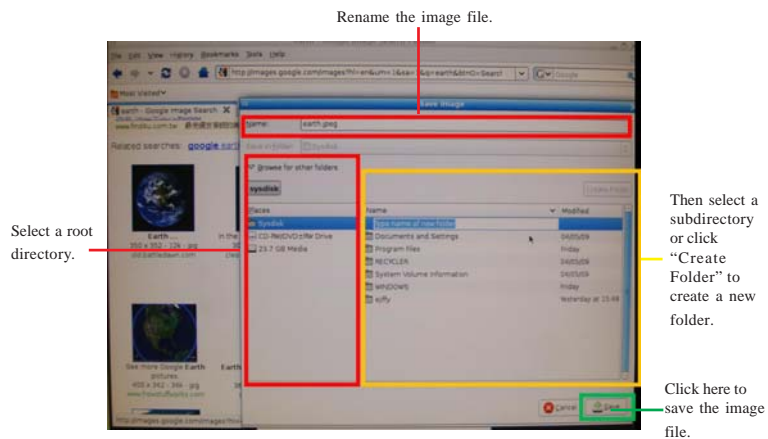


Setting Up eJIFFY



ePix: Photo viewing.

Q1: How to find image files saved in hard disk through ePix?

Enter the ePix window, then click the icon “Folder” located in the upper left-hand corner, then follow the path for the files you have saved to view the image files.

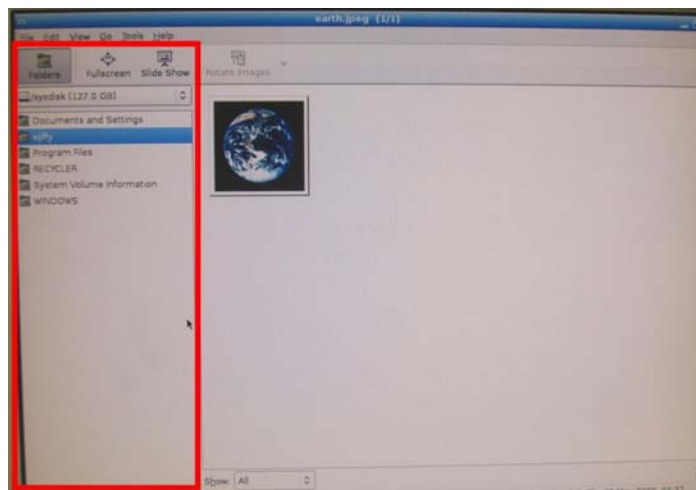


Setting Up eJIFFY

Q2: How to use the fit function under slide show?

1. Click “Edit” and select “Preferences” option from the menu.



2. Click “Viewer” and choose “Keep previous zoom” in “After loading an image”. Close the window and you can use the fit function under slide show now.

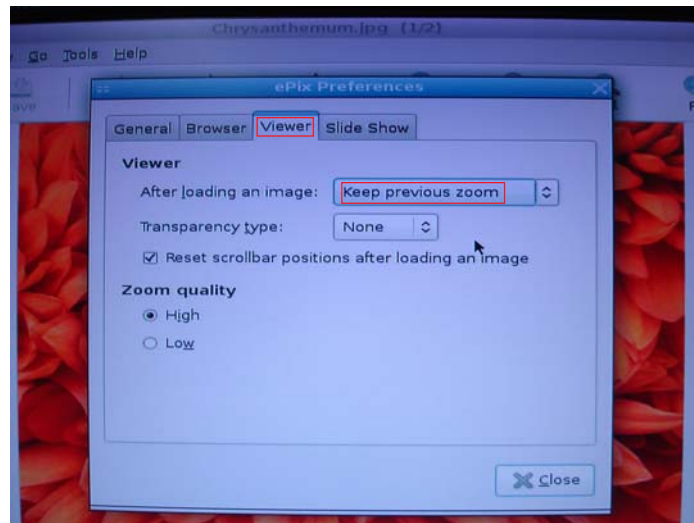

Note: ePix supports to view image files only. It cannot support Office Viewer or other forms beside image files. Supported image types are: BMP, JPEG, GIF (including GIF animations), PNG, TIFF, ICO and XPM.


Setting Up eJIFFY




Mount/Unmount Disk.

Q1: What does it mean for “Mount Disk”?



“Mount” means to connect the storage devices to eJIFFY interface.

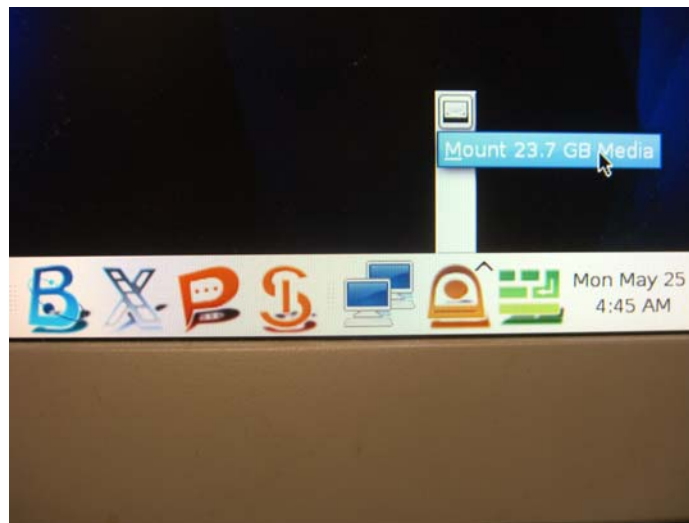
After plugging the external device to the computer such as USB drives, a new disk icon will appear as the following picture shows. Please click the “mount” prompt on the icon. It will change to  to show the device is detected successfully.



Q2: What does it mean for “Unmount Disk”?

“Unmount” is to safely remove the storage devices.

To unplug the external storage devices such as USB drives, users need to click the “Unmount” prompt as the following picture shows, then the icon  will change to  , you can remove the device now.

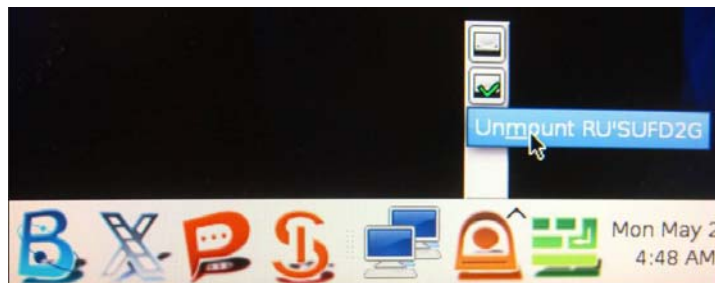

Setting Up eJIFFY

Memo

Setting Up eJIFFY

Chapter 6

Trouble Shooting

Start up problems during assembly

After assembling the PC for the first time you may experience some start up problems. Before calling for technical support or returning for warranty, this chapter may help to address some of the common questions using some basic troubleshooting tips.

a) System does not power up and the fans are not running.

1. Disassemble the PC to remove the VGA adaptor card, DDR memory, LAN, USB and other peripherals including keyboard and mouse. Leave only the motherboard, CPU with CPU cooler and power supply connected. Turn on again to see if the CPU and power supply fans are running.
2. Make sure to remove any unused screws or other metal objects such as screwdrivers from the inside PC case. This is to prevent damage from short circuit.
3. Check the CPU FAN connector is connected to the motherboard.
4. For Intel platforms check the pins on the CPU socket for damage or bent. A bent pin may cause failure to boot and sometimes permanent damage from short circuit.
5. Check the 12V power connector is connected to the motherboard.
6. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.

b) Power is on, fans are running but there is no display

1. Make sure the monitor is turned on and the monitor cable is properly connected to the PC.
2. Check the VGA adaptor card (if applicable) is inserted properly.
3. Listen for beep sounds. If you are using internal PC speaker make sure it is connected.
 - a. continuous 3 short beeps : memory not detected
 - b. 1 long beep and 8 short beeps : VGA not detected

c) The PC suddenly shuts down while booting up.

1. The CPU may experience overheating so it will shutdown to protect itself. Ensure the CPU fan is working properly.
2. From the BIOS setting, try to disable the Smartfan function to let the fan run at default speed. Doing a Load Optimised Default will also disable the Smartfan.

Start up problems after prolong use

After a prolong period of use your PC may experience start up problems again. This may be caused by breakdown of devices connected to the motherboard such as HDD, CPU fan, etc. The following tips may help to revive the PC or identify the cause of failure.

1. Clear the CMOS values using the CLR_CMOS jumper. Refer to CLR_CMOS jumper in Chapter 2 for Checking Jumper Settings in this user manual. When completed, follow up with a Load Optimised Default in the BIOS setup.
2. Check the CPU cooler fan for dust. Long term accumulation of dust will reduce its effectiveness to cool the processor. Clean the cooler or replace a new one if necessary.
3. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.
4. Remove the hard drive, optical drive or DDR memory to determine which of these component may be at fault.


Maintenance and care tips

Your computer, like any electrical appliance, requires proper care and maintenance. Here are some basic PC care tips to help prolong the life of the motherboard and keep it running as best as it can.

1. Keep your computer in a well ventilated area. Leave some space between the PC and the wall for sufficient airflow.
2. Keep your computer in a cool dry place. Avoid dusty areas, direct sunlight and areas of high moisture content.
3. Routinely clean the CPU cooler fan to remove dust and hair.
4. In places of hot and humid weather you should turn on your computer once every other week to circulate the air and prevent damage from humidity.
5. Add more memory to your computer if possible. This not only speeds up the system but also reduces the loading of your hard drive to prolong its life span.
6. If possible, ensure the power cord has an earth ground pin directly from the wall outlet. This will reduce voltage fluctuation that may damage sensitive devices.

Trouble Shooting

Basic Troubleshooting Flowchart

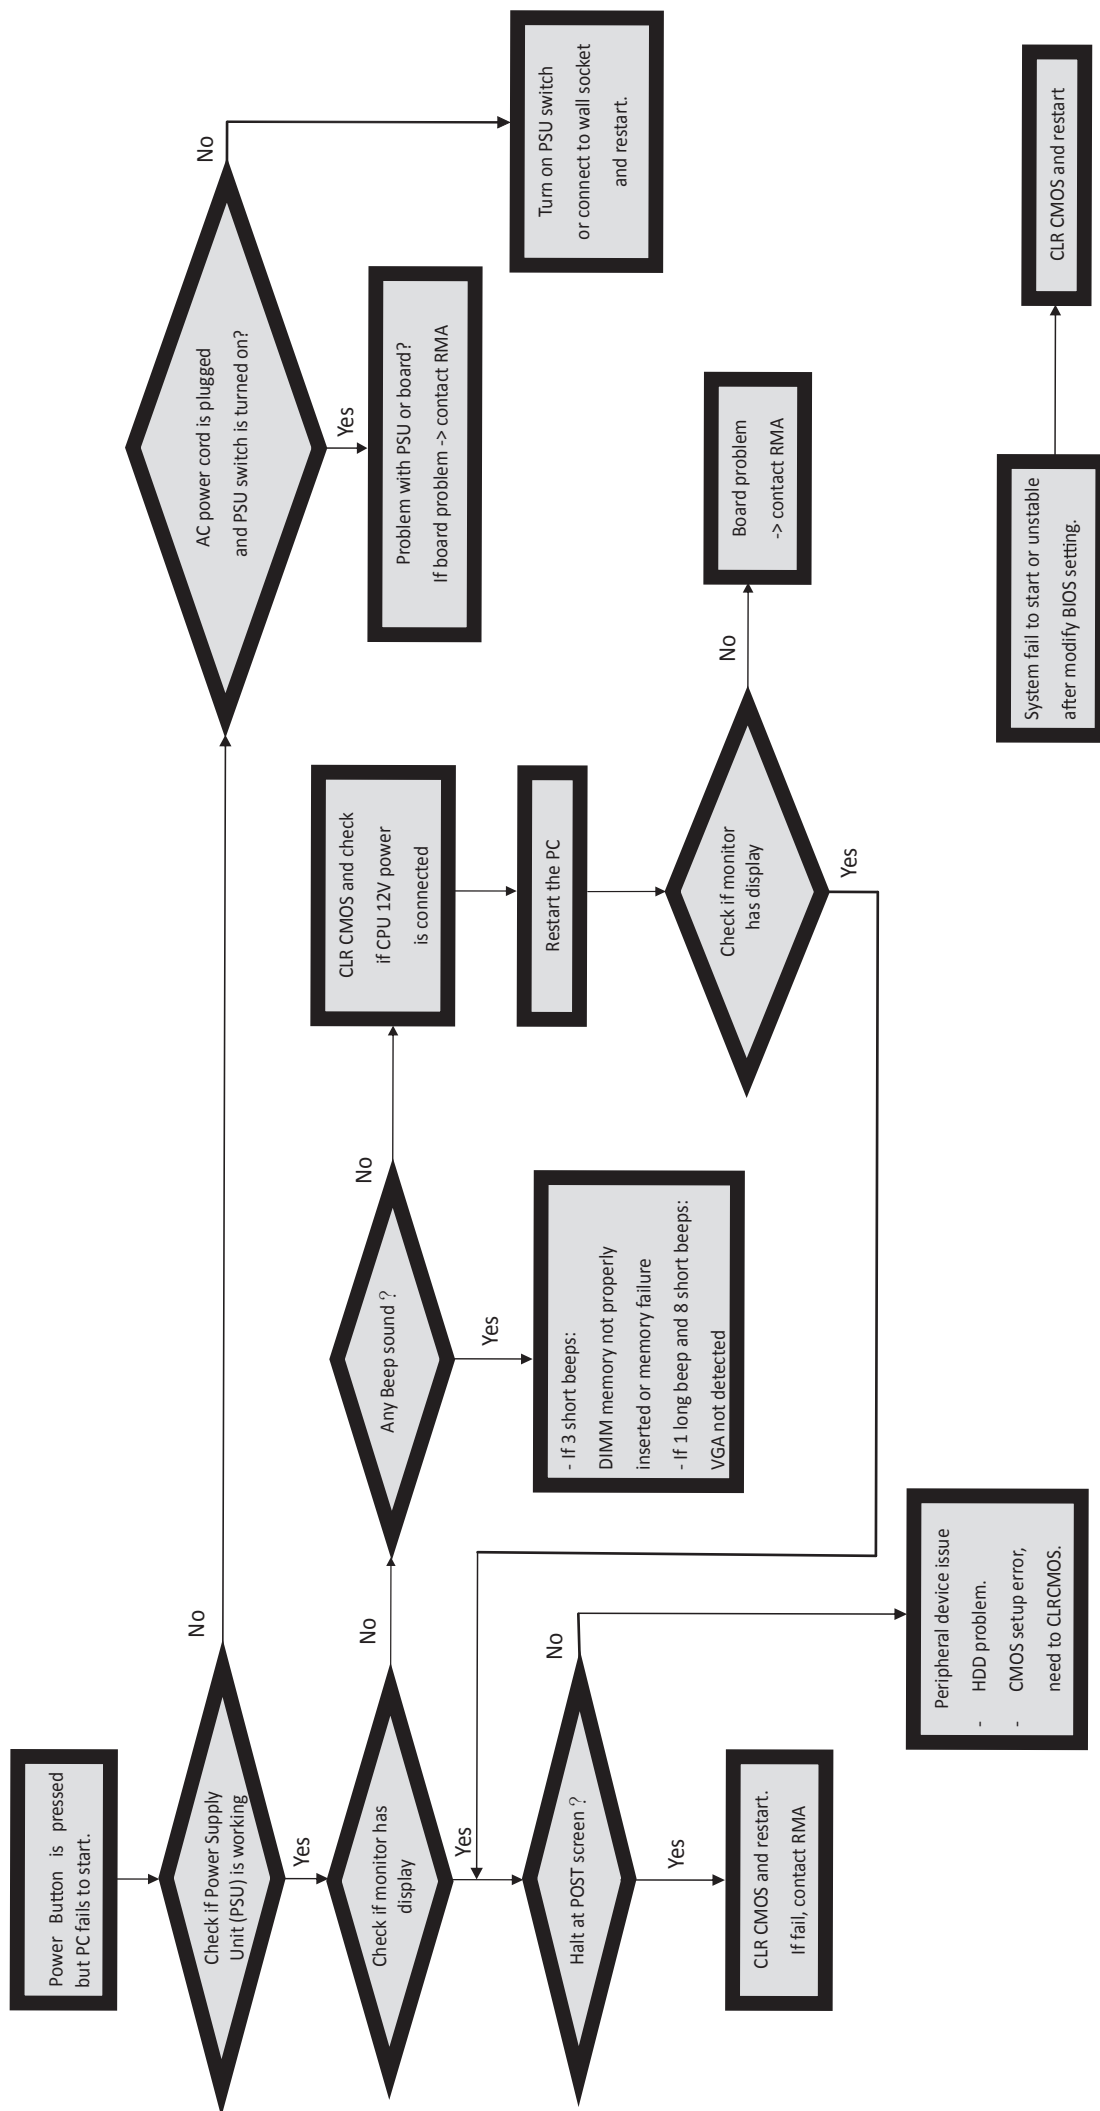

70

Memo

Trouble Shooting